


# everten

## ELECTRIC KETTLE

Owner's Manual

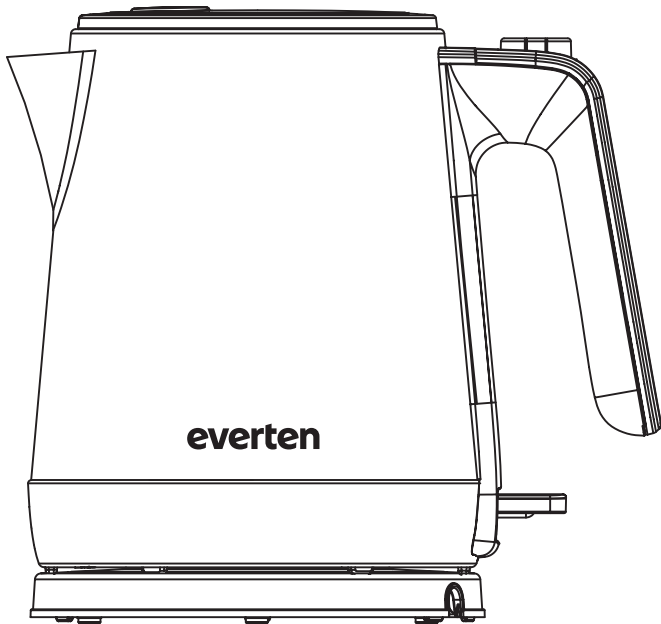

### **IMPORTANT**

Read and follow all warnings and instructions before assembly and use.  
Keep this manual for future reference.

**Everten** Electric Kettle 800mL 714884

## SPECIFICATIONS

- Model number: 714884
- Voltage: 220 - 240V ~ 50/60Hz
- Power consumption: 1680-2000W

## PRODUCT FEATURES

The Everten Electric Kettle combines sleek design with everyday convenience, making it a perfect addition to the modern kitchen. With an 800mL capacity, this compact stainless steel kettle boils a cup of water in just 70 seconds, so you can enjoy your favourite hot drink in no time.

- Compact size perfect for smaller kitchens and needs
- 800mL capacity
- Higher wattage than standard kettles for faster boiling
- The push-open lid ensures effortless refilling
- Auto shut-off feature offers added safety and peace of mind

## SAFETY PRECAUTIONS

When using this electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:


1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is intended to be used in household and similar applications such as:
  - A. Staff kitchen areas in shops, offices and other working environments.
  - B. Farmhouses.

C. By clients in hotels, motels and other residential type environments.

D. By bed and breakfast type environments.

7. To protect against electric shock, do not place the cord, plug or the base of the appliance in water or any other liquid.
8. Do not use attachments or accessories which are not recommended by the manufacturer.
9. The product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
10. Always use the appliance on a firm and stable surface and keep it 30cm from other objects and the wall to ensure heat is easily released.
11. Do not place the appliance on or near a hot surface, including a gas or electric stove, or in a heated oven.
12. Do not move the appliance when in use.
13. Not suitable for use with external timers or remote controls.
14. For indoor household use only.
15. Do not place anything on top of the appliance while in operation or when storing.
16. Do not use it with an extension cord. A short power cord is provided to reduce the risk of tripping, entanglement, or children grabbing it.
17. Do not let the cord hang over edges of tables or counters, or touch hot surfaces such as stoves.
18. Unplug the appliance when not in use and before cleaning.
19. Do not operate the appliance without filling the water to the minimum fill line as this will damage the heating element.
20. Do not fill past the maximum level (800mL) to avoid boiling water overflow.
21. Do not lift the kettle from the base while boiling.
22. Use the handle or lid button to avoid contact with hot surfaces or steam.
23. Scalding may occur if the lid is removed during or immediately after boiling.
24. Do not open the lid while the water is still hot.
25. Appliance is only to be used with the stand provided.
26. Warning: Avoid spilling liquids on the connector.
27. Warning: Improper use of the appliance may result in injury.
28. The heating element remains hot for a period after use. Handle with care.
29. CAUTION: Do not operate the kettle on an inclined surface. Always ensure the heating element is fully immersed and the kettle is filled to the MIN line. Do not move the kettle while it is in use.
30. CAUTION: To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

# GET TO KNOW THE EVERTEN ELECTRIC KETTLE

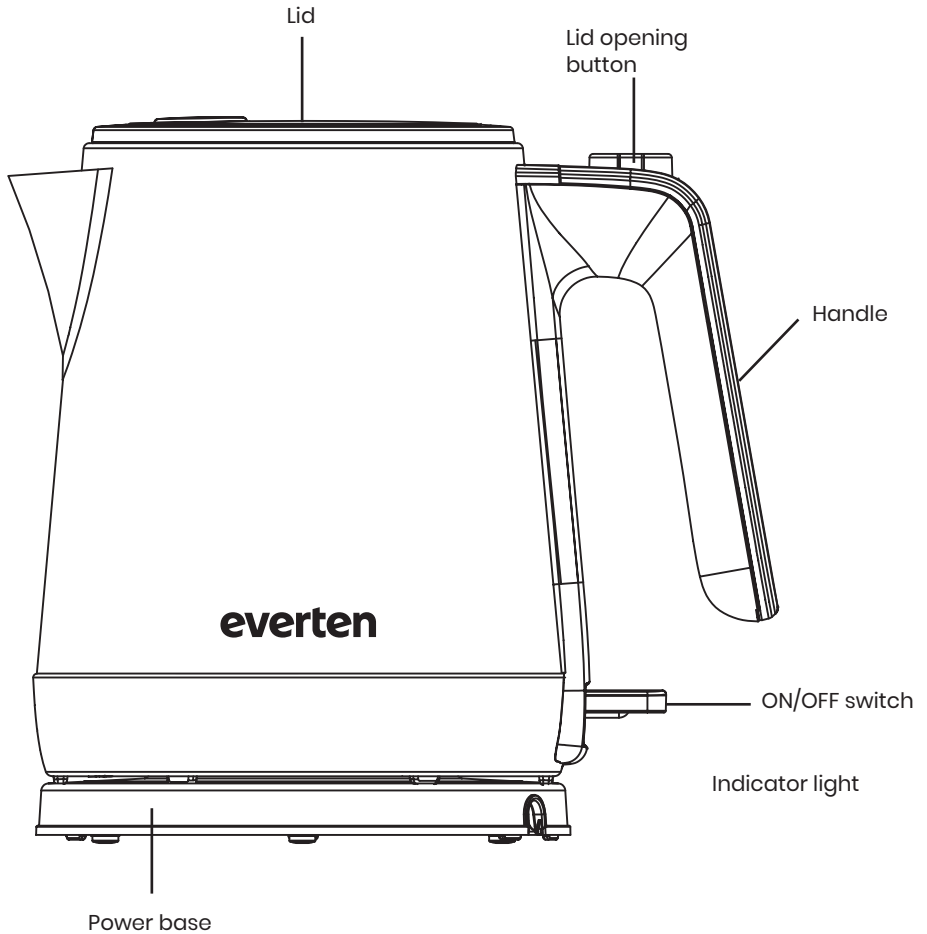

# OPERATING INSTRUCTIONS

## Before first use

1. Clean the kettle by boiling a full kettle of water twice and discarding the water each time.
2. Wipe the surface with a damp cloth.
3. Do not immerse the appliance in water.

*NOTE: The kettle's maximum capacity is 800mL, and minimum capacity is 250mL.*

## Using the kettle

1. Place the kettle on a flat, stable surface.
2. Open the lid using the release button and fill with water between the minimum and maximum marks.
3. Close the lid firmly and place the kettle on the base.
4. Plug the power cord into an outlet.
5. Press the ON/OFF switch, the indicator light will turn on and boiling will begin.
6. Once the water boils, the kettle will automatically switch off.
  - If necessary, wait 30 seconds before pressing the switch again to reboil.
  - To stop boiling early, lift the kettle from the base.
7. Carefully lift the kettle and pour out the water.
8. When not in use, unplug the kettle and store it on the base.

## Boil-dry protection feature

If the kettle is accidentally operated without water, the boil-dry protection system will automatically shut off the power. Allow the kettle to cool before refilling and restarting.

# CLEANING AND MAINTENANCE

1. Unplug and let the kettle cool completely before cleaning.
2. Do not immerse the kettle, base, or cord in water.
3. Wipe the exterior with a soft cloth. Do not use abrasive or chemical cleaners.
4. Clean the filter regularly by removing it from the inside of the lid and washing with warm, soapy water..
5. For storage, the power cord can be wrapped around the base.
6. Avoid using alkaline cleaners, steel wool or scouring pads.
7. Blades and heating elements may remain hot after use, handle with care.

## **Removal of mineral deposits**

Over time, minerals in tap water may cause scale buildup. Regular descaling is important.

### **To descale using vinegar:**

1. Add three cups of white vinegar and water to fill the kettle to maximum level.
2. Let the mixture sit overnight.
3. Empty the solution and rinse the kettle with clean water several times.
4. Boil and discard water once or twice more to remove odour.
5. Wipe any stains inside the spout with a damp cloth.

Alternatively, use a commercial descaling agent following its instructions.

# WARRANTY

## Get in touch with Customer Service

If you experience any issues with your Everten Electric Kettle, get in touch with our Customer Service team by email at [customerservice@kitchenwarehouse.com.au](mailto:customerservice@kitchenwarehouse.com.au) or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday. Alternatively you can use the Live Chat function on our website by visiting [www.kitchenwarehouse.com.au/contact-us](http://www.kitchenwarehouse.com.au/contact-us)

## 90 day money back guarantee

We promise you a full refund within 90 days if your Everten product does not fulfil your expectations. This guarantee applies to qualified purchases of all Everten branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

## Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

## Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

## **Exclusions**

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

## **How to claim**

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

## **Limitations**

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

# **everten**

Distributed by Kitchen Warehouse.

Everten is a registered trademark of Kitchen Warehouse Pty Ltd. The printed material appearing in this document and related packaging is protected by copyright.

### **Kitchen Warehouse Pty Ltd**

1 Pensioner Guard Road

North Fremantle, WA, 6159

[www.kitchenwarehouse.com.au](http://www.kitchenwarehouse.com.au)

1800 332 934

[customerservice@kitchenwarehouse.com.au](mailto:customerservice@kitchenwarehouse.com.au)