

WOLSTEAD

Perfection 8-in-1 Rice Cooker 10 Cup

Owner's Manual



IMPORTANT:

Read and follow all warnings and instructions before assembling and using the appliance. Keep this manual for future reference.

WOLSTEAD Perfection 8-in-1 Rice Cooker 10 Cup 719290

SPECIFICATIONS

Model: 719290

Voltage: 220-240V ~ 50/60Hz

Power consumption: 860W

PRODUCT FEATURES

Experience convenient, versatile cooking with this 8-in-1 rice cooker featuring a Ceramax™ ceramic non-stick inner cooking pot and a removable double lid for easy cleaning. With a 24 hour preset timer and keep warm function, it's perfect for rice, brown rice, quick rice, porridge, multigrain dishes, steaming and reheating.

- Eight preset cooking programs: rice, quick rice, brown rice, steam, porridge, multigrain, reheat, keep warm
- 24 hour delay start and keep warm feature
- The Ceramax™ ceramic non-stick inner cooking pot is free from PFAS, PTFE, PFOA, lead, and cadmium, and easy to clean
- Automatically adjusts cooking temperature for flawless results
- Cyclone bubble breaker in the lid breaks bubbles before they rise and overflow, stabilises the boil for more even cooking, and reduces burning
- 10 cup capacity perfect for family meals
- Detachable inner lid makes cleaning easy

CERAMAX™ NON-STICK COATING

The inner cooking pot features a hard, durable, ceramic non-stick coating called Ceramax™ which is more environmentally friendly than traditional non-stick. Ceramax™ is thermo-resistant, easy to clean, and free from PFAS, PTFE, PFOA, lead, and cadmium.

SAFETY PRECAUTIONS


When using this electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is intended to be used in household and similar applications such as:
 - i. Staff kitchen areas in shops, offices and other working environments.
 - ii. Farmhouses.
 - iii. By clients in hotels, motels and other residential type environments.
 - iv. By bed and breakfast type environments.
7. To protect against electric shock, do not place the cord, plug or the base of the appliance in water or any other liquid.
8. Do not use attachments or accessories which are not recommended by the manufacturer.
9. The product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
10. Always use the appliance on a firm and stable surface and keep it 30cm from other objects and the wall to ensure heat is easily released.
11. Do not place the appliance on or near a hot surface, including a gas or electric stove, or in a heated oven.
12. Do not move the appliance when in use.
13. Not suitable for use with external timers or remote controls.
14. For indoor household use only.
15. Allow the appliance to cool before cleaning, disassembling, putting in or taking out parts, and storing.
16. Appliance surfaces can get hot during and after operation. The appliance generates heat and steam. Avoid burns by keeping hands and face clear of the air outlet and by using oven mitts when handling the inner cooking pot and other hot parts.
17. Do not cover the appliance while in use or when storing.
18. Do not cook ingredients likely to clog the steam vent (e.g. seaweed, Chinese cabbage, kelp).
19. Regularly inspect and clean the steam vent and valve.
20. Only use the provided lid. Other lids may be incompatible and unsafe.
21. Do not open the lid during operation to avoid injury from steam.
22. Do not use the inner pot with other appliances or for other purposes.
23. Keep metal objects out of gaps between the inner pot and cooker housing.

GET TO KNOW THE WOLSTEAD PERFECTION 8-IN-1 RICE COOKER

Product Components

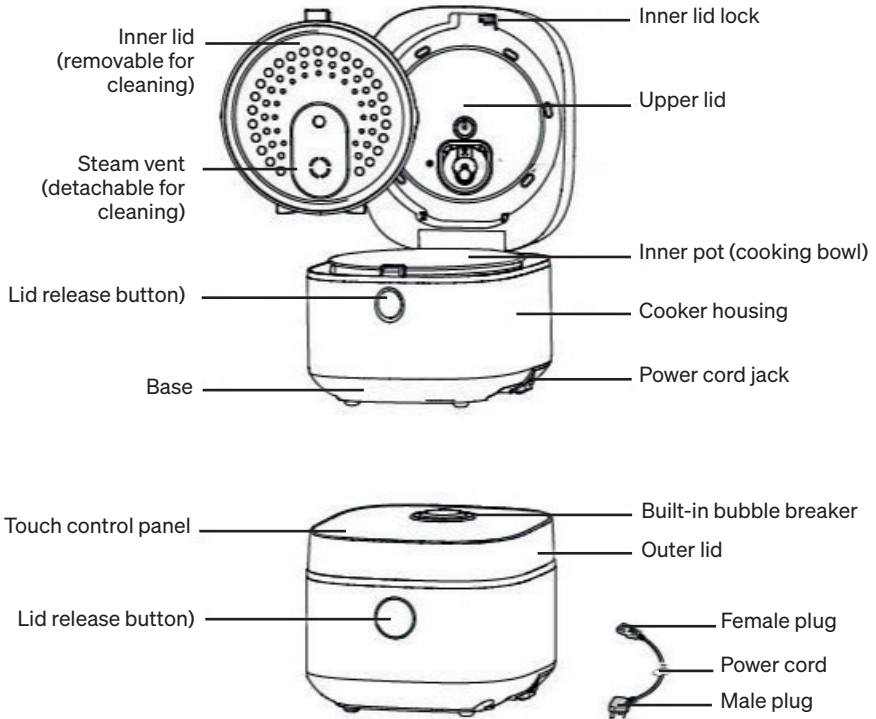

Included accessories



Scoop



Ladle



Measuring cup




Inner pot



Power cord

CONTROL PANEL OVERVIEW

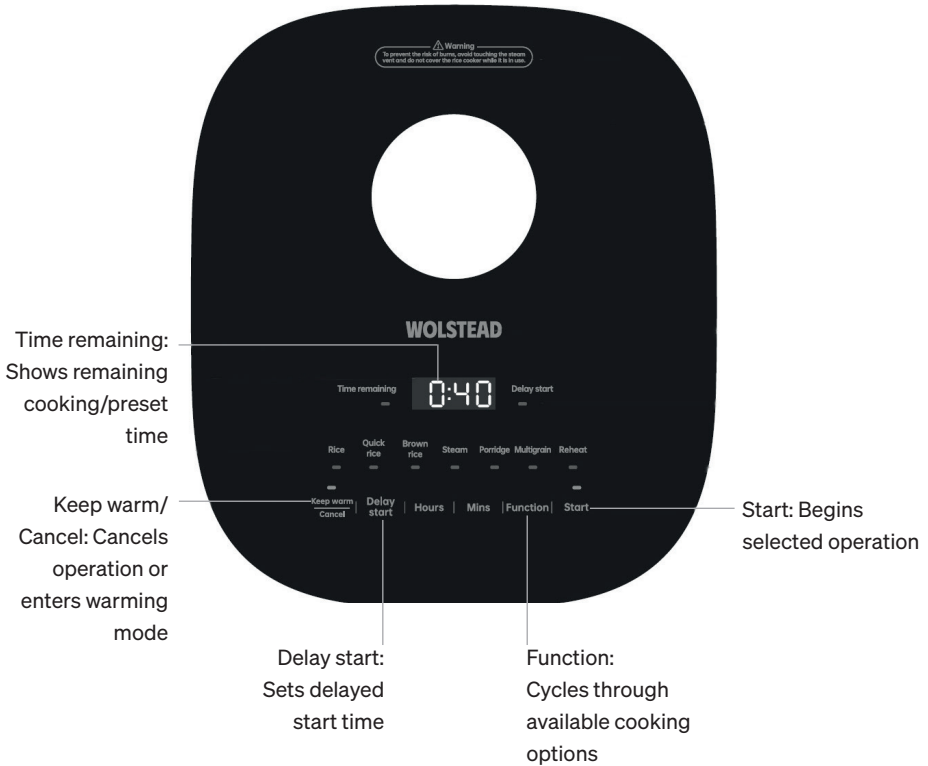


Before first use

- Ensure the steam vent, bubble breaker, inner lid, and seal ring are clean and properly installed.

REMOVING AND INSTALLING THE INNER LID

To remove

1. Push the inner lid buckle to the right until it detaches.

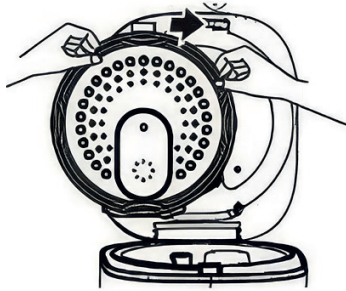

To install

1. Align the lid with the outer lid.
2. Press firmly until it snaps into the lock.



OPERATING INSTRUCTIONS

1. Place the inner cooking pot in the appliance and close the lid. Rotate gently until secured. Ensure the inner lid and steam vent are correctly installed.
2. Measure rice using the provided cup (160mL).
3. Rinse rice: Rinse until water runs clear.
4. Add water: Use inner cooking pot water level markings. For example, to cook four cups of rice, add rinsed rice to the inner pot and then add water up to the level four marker.
5. Plug into power.
6. Press the function button to cycle through the different preset cooking modes.

1. To start cooking press the start button. Cooking begins after a beep. The corresponding function indicator light and the start indicator light will turn on. The digital display will show the remaining working time.
2. At the end of the cycle, the appliance will beep five times and then enter the keep warm mode.
3. To turn the rice cooker off, long press keep warm/cancel for one second.

Using the delay start function

1. Press function to select cooking mode.
2. Press delay start to begin the timer setup.
3. Adjust the time using the hours and mins buttons. The default preset time is three hours.
4. Press the mins keys to increase the delay time by 10 minutes.
5. Press the hours keys to increase the delay time by one hour.
6. Maximum settable delay time is 24:00 (settings are cyclic).
7. Press start to confirm. The delay time you set determines when cooking will begin. Cooking will start automatically once the delay time is reached.
8. When the delay countdown ends, the start indicator light turns on and cooking begins. After cooking is complete, the appliance automatically switches to keep warm mode.
9. To cancel: Long press keep warm/cancel for one second.

Cooking with the porridge function

1. Select porridge using the function button.
2. Use hours/mins to set cooking time (default: 120 mins).
3. Press start to begin.

Delay porridge cooking

1. Press function to select porridge.
2. Set cooking time.
3. Press delay start, then adjust the delay timer.
4. Press start to confirm.

Max preset time: 24 hours.



PRESET COOKING FUNCTIONS AND SETTINGS

Function	Default time	Adjustable time range	Water level	Capacity	Delay start	Keep warm
Rice	30 to 60 mins	N/A	Rice	1 to 10 cups	✓	✓
Quick rice	30 to 55 mins	N/A	Rice	1 to 10 cups	×	✓
Brown rice	60 to 90 mins	N/A	Brown rice	1 to 5 cups	✓	✓
Steam	30 mins	1 to 60 mins	Steam max	Varies	✓	✓
Porridge	2 hours	1 to 4 hours	Porridge	0.5 to 1.5 cups	✓	✓
Multigrain	2 hours	1 to 4 hours	Multigrain	1 to 6 cups	✓	✓
Reheat	25 mins	N/A	N/A	N/A	×	✓
Keep warm	24 hrs	N/A	N/A	N/A	×	×

Actual cooking time may vary depending on rice type, water volume, temperature, etc.

For the rice, quick rice, and brown rice presets, the cooking time automatically adjusts within a defined range depending on the amount of rice and water added (that is, the number of cups used).

For the multigrain and porridge presets, the cooking time is fixed at two hours. Within this two hour cycle, any supported combination of cup measurements will cook the food correctly.

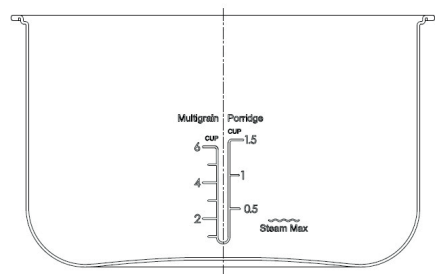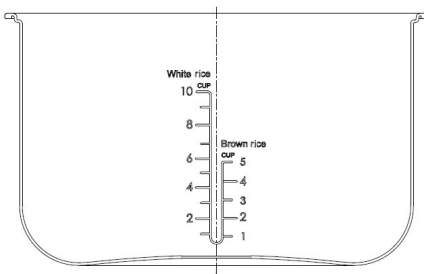

CLEANING AND MAINTENANCE

1. Unplug and allow the rice cooker to cool before cleaning.
2. Use a damp cloth for the outer body.
3. Clean the inner pot, lid, scoop, etc. with a soft sponge.
4. Avoid abrasive cleaners, steel brushes, or solvents.
5. Disassemble and clean the bubble breaker regularly (to remove, hold the bubble breaker and turn counterclockwise).
6. Remove the inner lid and clean the steam vent.

TROUBLESHOOTING

Issue	What to check
Rice too soft	Water ratio, uneven inner pot, rice not stirred
Rice too hard	Not enough water, sensor not wiped, long power outage, lid not sealed
Smelly rice	Poor rinsing, too long in keep warm mode, dirty parts not cleaned
Rice discoloured	Not rinsed, pot not clean, too long in keep warm mode
No power	Plug properly inserted into socket
Pops during cooking	Normal heat expansion; not a malfunction
Steam vent noise	Normal steam release sound
Lid won't close	Rice/dirt stuck near lid lock; clean carefully

Error Codes

Error code	Description	Action
F1	Short circuit (bottom sensor)	Check if the bottom sensor terminals are loose or if the bottom sensor is damaged. After troubleshooting, it will automatically enter the function selection mode. If you are unable to fix this issue, contact the Kitchen Warehouse Customer Service Team.
F2	Open circuit (bottom sensor)	Check if the bottom sensor is damaged. After troubleshooting, it will automatically enter the function selection mode. If you are unable to fix this issue, contact the Kitchen Warehouse Customer Service Team.

F3	Short circuit (top sensor)	<p>Check if the lid sensor terminals are loose or if the lid sensor is damaged. After troubleshooting, it will automatically enter the function selection mode.</p> <p>If you are unable to fix this issue, contact the Kitchen Warehouse Customer Service Team.</p>
F4	Open circuit (top sensor)	<p>Check if the lid sensor is damaged. After troubleshooting, it will automatically enter the function selection mode.</p> <p>If you are unable to fix this issue, contact the Kitchen Warehouse Customer Service Team.</p>

WARRANTY

Get in touch with Customer Service

If you experience any issues with your Wolstead Perfection 8-in-1 Rice Cooker 10 Cup, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com, au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday. Alternatively you can use the Live Chat function on our website by visiting www.kitchenwarehouse.com.au/contact-us

90 day money back guarantee

We promise you a full refund within 90 days if your Wolstead product does not fulfil your expectations. This guarantee applies to qualified purchases of all Wolstead branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

WOLSTEAD

Distributed by Kitchen Warehouse.

Wolstead is a registered trademark of Kitchen Warehouse Pty Ltd. The printed material appearing in this document and related packaging is protected by copyright.

Kitchen Warehouse Pty Ltd
1 Pensioner Guard Road
North Fremantle, WA, 6159
www.kitchenwarehouse.com.au
1800 332 934
customerservice@kitchenwarehouse.com.au