


Dreame Aqua10 Ultra Track S

DREAME

Robot Vacuum and Mop with
Auto-Empty and Mop Self-Cleaning

User Manual

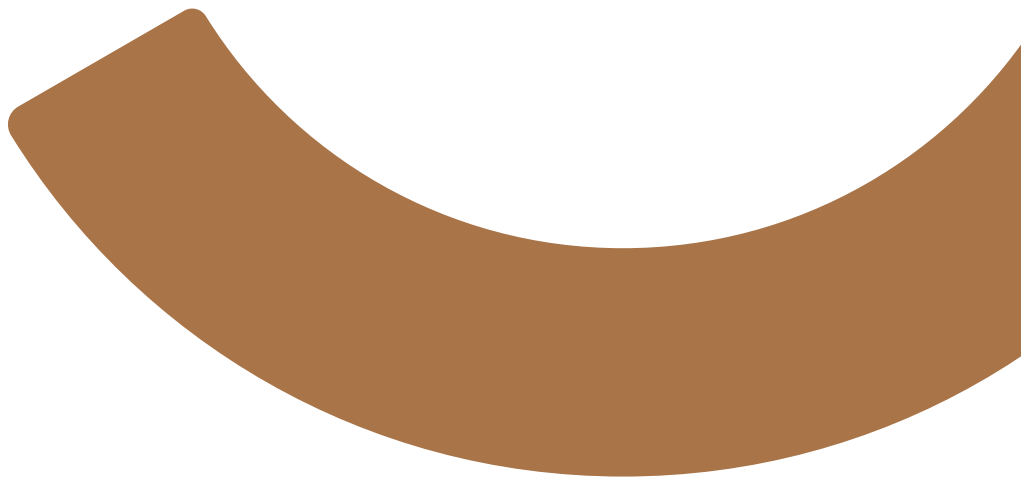

The illustrations in this manual are for reference only. Please refer to the actual product.

Contents

| | |
|------------------------------------|----|
| Safety Information | 1 |
| Product Overview | 5 |
| Before Use | 7 |
| How to Use | 9 |
| Routine Maintenance | 11 |
| Troubleshooting | 17 |
| Specifications | 20 |
| Battery Disposal and Removal | 21 |
| Warranty | 21 |

Safety Information

To avoid electric shock, fire or injury caused by improper use of the appliance, please read the user manual carefully before using the appliance and keep it for future reference.

Usage Restrictions

- This product should not be used by children younger than 8 years old nor persons with physical, sensory, intellectual deficiencies, or limited experience or knowledge without the supervision of a parent or guardian to ensure safe operation and to avoid any risks. Cleaning and maintenance shall not be performed by children without supervision.
- The appliance is only to be used with the power supply unit provided with the appliance.
- This appliance contains batteries that are only replaceable by skilled persons.
- Clear the area to be cleaned. Children shall not play with the appliance. Ensure children and pets are kept at a safe distance from the robot while it is operating.
- Do not install, charge or use the appliance in the bathrooms or around the pools.
- This product is for floor cleaning in a home environment only. Do not use it outdoors, on non-floor surfaces, or in a commercial or industrial setting.
- Ensure that the appliance operates correctly in a proper environment. Otherwise, do not use the appliance.
- If the power cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- Do not use the robot in an area suspended above ground level without a protective barrier.
- Do not place the robot upside down. Do not use the LDS cover, robot cover, or

Safety Information

Usage Restrictions

- bumper as a handle for the robot.
- Use the robot in environments with an ambient temperature above 0° C and below 40° C. Make sure there is no liquid or sticky substance on the floor.
- To prevent damage or harm from dragging, clear any loose objects from the floor, and remove cables or power cords on the cleaning path before operating the appliance.
- Remove fragile or small items from the floor to prevent the robot from bumping into and damaging them.
- Keep hair, fingers, and other body parts away from the suction opening of the robot.
- Keep the cleaning tool out of reach of children.
- Do not operate the appliance in a room where an infant or child is sleeping.
- Do not place children, pets, or any item on top of the robot regardless of whether it is stationary or moving.
- Only clean water and the officially-approved cleaning solution can be added to the clean water tank. Do not add any other liquid such as alcohol or disinfectant. The ratio of the cleaning solution to clean water can be checked on the cleaning solution bottle. Keep the cleaning solution out of reach of children.
- Do not use the robot to clean any burning objects. Do not use the robot to pick up flammable or combustible liquids, corrosive gases, or undiluted acids or solvents.
- Do not vacuum hard or sharp objects. Do not use the appliance to pick up objects such as stones, large pieces of paper or any item that may clog the appliance.

Safety Information

Usage Restrictions

- Plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- Do not wipe the robot or the base station with a wet cloth or rinse them with any liquid. After cleaning washable parts, fully dry the parts before reinstalling and using them.
- Please use this product in accordance with the instructions in the User Manual. Users are responsible for any loss or damage that arise from improper use of this product.

Batteries and Charging

- **WARNING:** Against recharging non-rechargeable batteries. Failing to do so may cause the lithium-ion battery to catch fire.
- Do not use any third-party battery or base station. The robot can only be used with the model RCZE0308 base station.
- Do not attempt to disassemble, repair, or modify the battery or the base station on your own.
- Do not place the base station near a heat source.
- Do not use a wet cloth or wet hands to wipe or clean the base station's charging contacts.
- Do not improperly dispose of old batteries. Unneeded batteries should be discarded at an appropriate recycling facility.
- If the power cord becomes damaged or broken, stop using it immediately and contact after-sales service.
- Make sure the robot is turned off when being transported and kept in its original

Safety Information

Batteries and Charging

- packaging if possible.
- If the robot will not be used for an extended period of time, fully charge it, then turn it off and store it in a cool, dry place. Recharge the robot at least once every 3 months to avoid over-discharging the battery.

Laser Safety Information

- The laser sensor in this product meets the IEC 60825-1:2014/EN 60825-1:2014/A11:2021 Standard for Class 1 laser products. Please avoid direct eye contact with it during use.

CLASS 1 LASER PRODUCT
CONSUMER LASER PRODUCT
EN 50689:2021



For indoor use only




Read operator's manual

For detailed e-manual, please go to <http://global.dreamtech.com/pages/user-manuals-and-faqs>

Product Overview

Robot

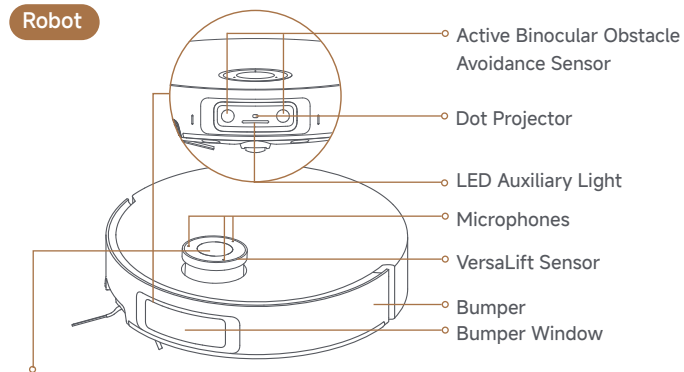

Dock Button

- Press to send the robot back to the base station
- Press and hold for 3 seconds to disable Child Lock

Power / Clean Button

- Press and hold for 3 seconds to turn on or off
- Press to start cleaning after the robot is turned on

Circular Status Indicator




- Solid Blue: Cleaning (needs to be enabled in the app) or cleanup completed
- Solid Green: Charging
- Blinking Orange: Error

Button Status Indicator

- Solid White: Cleaning or cleanup completed
- Breathing White: Charging (not low battery)
- Solid Orange: Awaiting at low battery or paused at low battery
- Breathing Orange: Charging (low battery)
- Blinking Orange: Error



Note:

- Press any button on the robot to pause while the robot is cleaning or returning to charge.
- Child Lock can be enabled/disabled through the Dreamehome App.
- The VersaLift sensor will be lowered when the robot is awaiting, charging on the base station, or cleaning low-clearance areas. In the case of cleaning low-clearance areas, do not move the robot as it may affect its positioning.

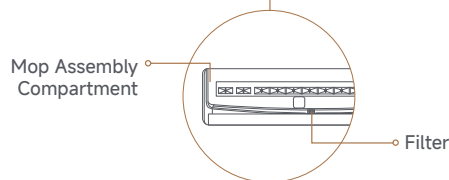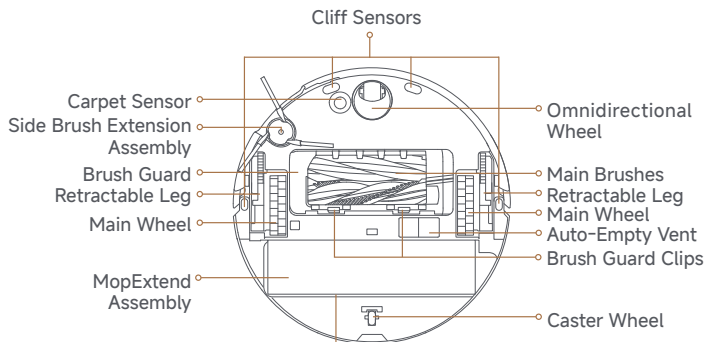
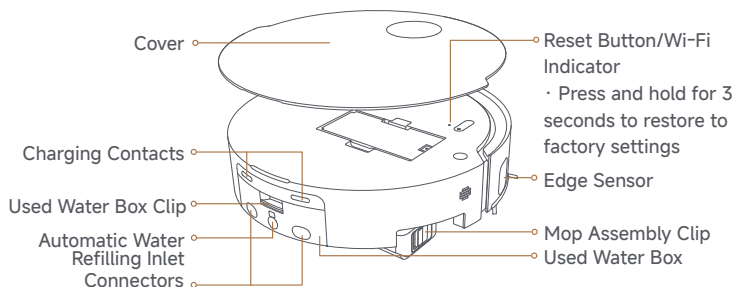


Product Overview



Dust Box

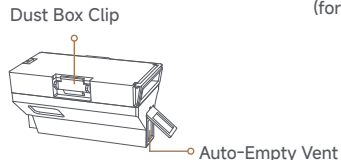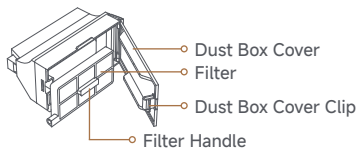


Mop Assembly

  

Base Station

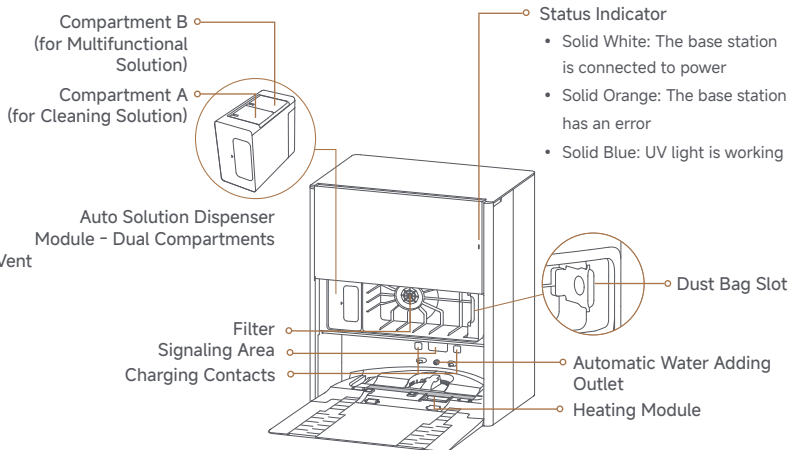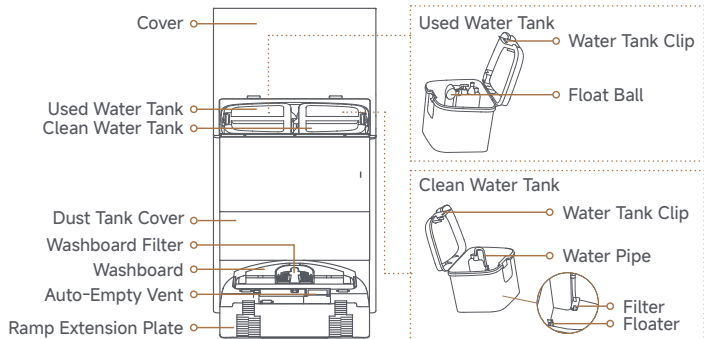

Note: The module can be replaced with a single-compartment version to accommodate a larger capacity of cleaning solution. If needed, it can be purchased through official channels.

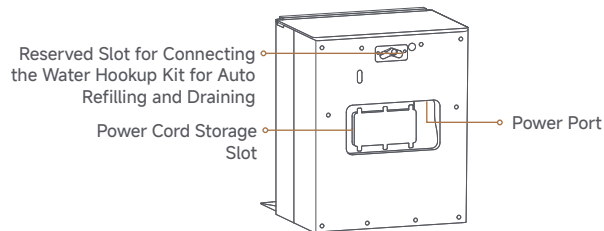


Note: The water hookup kit for auto refilling and draining needs to be purchased separately. (Only available in specific regions)

Before Use


Preparing Your Home




Before cleaning, please move away unstable, fragile, valuable or dangerous items, and clean up cables, cloths, toys, hard objects and sharp objects on the ground to avoid being entangled, scratched or knocked over by the robot and causing losses.

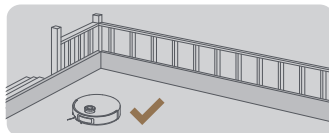

Before cleaning, place a physical barrier at the edge of the stairs to ensure the secure and smooth operations of the robot.

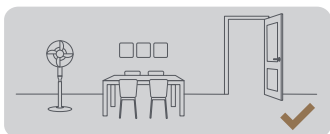

Open the door of the room to be cleaned, and put the furniture in its proper place to leave more space.

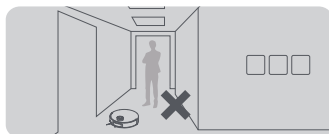


To prevent the robot from missing areas that need to be cleaned, do not stand in front of the robot, threshold, hallway, or narrow places.

Note:

- When operating the robot for the first time, follow it around while cleaning to remove any potential obstacles in time.
- The LED auxiliary light will provide auxiliary lighting in dimly lit environments.
- Do not vacuum hard objects like stones, steel balls and toy parts, or sharp objects like construction waste, broken glass and nails, otherwise the ground may be scratched.

1. Place the Base Station and Connect to an Electrical Outlet


Place the base station in a location that is as open as possible with a good Wi-Fi signal. Leave enough space as shown in the figure and remove any objects in the shaded area. Insert the power cord into the base station and plug it into the socket.

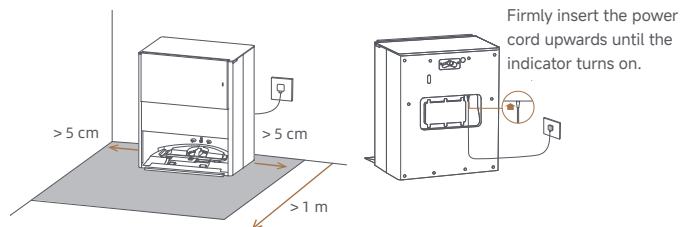

Note:

- Make sure that no objects might block the signaling area.
- To prevent water stains from wetting wood floors or carpets, placing the base station on tile floors or marble floors is recommended.

2. Install the Ramp Extension Plate

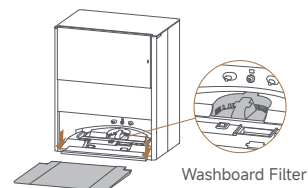


Note:

- Ensure that the washboard filter is installed into place before use.
- The washboard filter can be removed for cleaning during routine maintenance.

Before Use


3. Remove Robot Protections

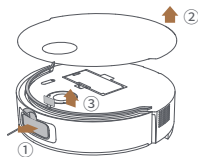

4. Connect with the Dreamehome App

(1) Press and hold the power button on the robot for 3 seconds to turn it on. Remove the robot cover and scan the QR code on the robot, or search "Dreamehome" in the app store to download and install the app.

(2) Open the Dreamehome app, tap "Scan QR code to connect" and scan the same QR code on the robot again to add the device. Please follow the prompts to finish the Wi-Fi connection.

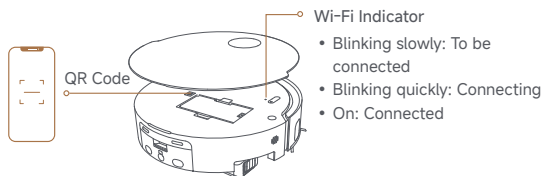

Note:

- Only 2.4 GHz Wi-Fi is supported.
- To reset Wi-Fi, repeat step (2) and then follow the prompts to finish the Wi-Fi connection.
- Due to upgrades in the app software, the actual operations may differ from the directions in this manual. Please follow the instructions based on the current app version.
- To disconnect the device from Wi-Fi network, press and hold the Reset button on the robot for 3 seconds.

5. Connect the Robot to the Base Station

Press and hold the power button on the robot for 3 seconds to turn it on. Place the robot onto the base station with the mop assembly facing toward the washboard. Then you will hear a voice notification when the robot successfully connects to the base station. After the robot is fully charged, the status indicators on the robot and the base station will remain lit for 10 minutes and will then dim.




Note: It is recommended to fully charge the robot before its first use. When the robot cannot be turned on after the battery is depleted, manually connect the robot with the station to charge it.

6. Add the Cleaning Solution and Pet Odor Solution

- (1) Remove the dust tank cover and pull out the auto solution dispenser module.
- (2) Open the upper lids of the module. Add the cleaning solution to compartment A and pet odor solution to compartment B.
- (3) Close the lids of the module, put it back into the base station, and then reinstall the dust tank cover. The solutions will be added automatically during operation.

Before Use

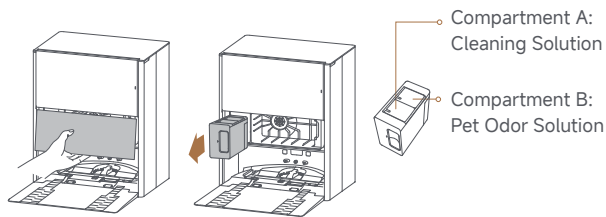


Note:

- Do not mix or interchange the solutions for both compartments to prevent malfunction.
- The auto solution dispenser module can be filled up for use. Do not add any liquids that are not officially-approved to prevent malfunction.
- Install the auto solution dispenser module until it clicks into place.

7. Add Water to the Clean Water Tank

Take out the clean water tank from the base station and fill up the tank with clean water. Then install it back into the base station.

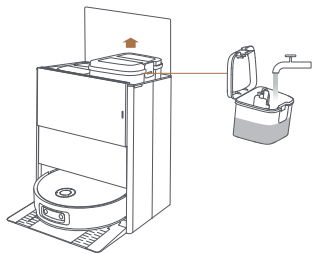

Note: Do not add hot water into the water tank, as this may cause the tank to become deformed.

How to Use

Turn On/Off

Press and hold the power button for 3 seconds to turn on the robot. The power indicator will remain lit. Or, place the robot onto the base station by aligning the charging contacts of the robot with those of the base station, and then the robot will turn on automatically and begin charging. To turn off the robot, move the robot away from the base station and press and hold the power button for 3 seconds

Fast Mapping

After configuring the network for the first time, follow the instructions in the app to quickly create a map. The robot will start mapping without cleaning. When the robot returns to the base station, the mapping process has been completed and the map will be saved automatically.

Pause/Sleep

When the robot is running, press any button to pause it. If the robot is paused for more than 10 minutes, it automatically enters sleep mode. All indicators on the robot will turn off. Press any button on the robot, or use the app to wake up the robot.

Note: If the robot is paused and placed onto the base station, the current cleaning process will end.

Auto Resume Cleaning

If the battery is too low, the robot will automatically return to the base station to charge. After charging to the appropriate battery level, it will resume unfinished cleaning tasks.

Note: To use this function, please enable it in the app.

How to Use

Do Not Disturb (DND) Mode

When the robot is set to the Do Not Disturb (DND) mode, the robot will be prevented from resuming cleaning. The DND mode is disabled by default at the factory. You can use the app to enable the DND mode or modify the DND period. The DND period is 22:00-8:00 by default.

Note:

- The scheduled cleaning tasks will be performed on time during the DND period.
- The robot will resume cleanup where it left off after the DND period expires.

Robot Restarting

If the robot stops responding or cannot be turned off, press and hold the power button for 10 seconds to forcefully turn it off. Then, press and hold the power button for 3 seconds to turn the robot on.

Vacuum and Mop

Note: When using the robot for the first time, the robot will default to "Vacuum and Mop" mode. To adjust the cleaning mode, go to the Cleaning Mode settings in the app and select from the following three additional options:

- ① Mop after Vacuuming
- ② Vacuum
- ③ Mop

1. Start cleaning

Press the power button on the robot, or use the app to make the robot start from the base station. Then the robot will plan the optimal cleaning route and perform the cleaning task based on the created map.

Note:

- To ensure the robot easily returns to the base station after cleaning, it is recommended to make the robot start from the base station.
- The mop will be cleaned before the robot starts mopping, please wait patiently.
- Do not move the base station, the clean water tank, the used water tank, or the washboard filter during operation.
- To prevent scalding, do not touch the water outlet or heating module while the base station is operating.

2. Auto mop washing

When cleaning, the robot will automatically return to the base station to wash the mop based on the mop cleaning frequency specified in the app. The base station will automatically refill the robot's water tank and the robot will resume cleanup.

3. Automatically empty the dust box and wash and dry the mop

After the robot finishes a cleaning task and returns to the base station to charge, the base station will automatically empty the dust box and then wash and dry the mop.

Note:

- If the auto-empty function is turned off in the app, the base station will not automatically empty the dust box.
- The base station will empty the dust box according to the setting in the app.

4. Clean the used water tank

After the robot has completed its task, please clean the used water tank to prevent any odor.

Routine Maintenance

Parts

To keep the robot in good condition, it is recommended to refer to the accessory usage in the app or the following table for routine maintenance.

| Part | Maintenance Frequency | Replacement Period |
|-------------------------------|--------------------------|----------------------|
| Used water tank | After each use | / |
| Clean water tank | Once every 2 weeks | |
| Main brushes | | Every 6 to 12 months |
| Dust box's filter | | Every 3 to 6 months |
| Side brush | | |
| Washboard filter | Once every 1 to 2 months | / |
| Washboard heating module | Once every 6 months | / |
| Base station's signaling area | Once every month | / |
| Charging contacts | | |
| Auto-empty vents | | |
| Omnidirectional wheel | | |
| Caster wheel | | |
| Edge sensor | | |
| VersaLift sensor | | |
| Carpet sensor | | |


| Part | Maintenance Frequency | Replacement Period | |
|---|-----------------------|---------------------|---------------------|
| Cliff sensors | Once every month | / | |
| Bumper window | | | |
| Bumper | | | |
| Robot's automatic water refilling inlet | | | |
| Bottom of the robot | | | |
| Dust box | Clean it as needed | / | |
| Main wheels | | | |
| Retractable legs | | | |
| Used water box | | | |
| Mop assembly compartment | / | Every 2 to 4 months | |
| Dust bag | | / | Every 1 to 3 months |
| Mop | | | |

Note: The frequency of maintenance and replacement depends on actual usage. If an exception occurs due to special circumstances, prompt maintenance or replacement is recommended.

Routine Maintenance


Washboard Filter


1. Take out the robot and remove the washboard filter after the mop pad cleaning is complete.

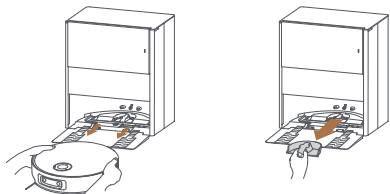

Note: The washboard heating module may retain residual heat. To prevent scalding, be careful when removing the washboard filter.

2. Rinse the washboard filter with clean water, wipe it clean, and then reinstall it in the washboard.

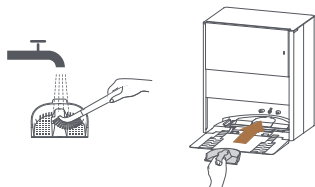


3. Use the app or press the button  to return the robot to the base station, or manually put the robot back.

Washboard Heating Module

During use, the washboard heating module may develop scale. To remove it, take out the robot, pour a small amount of white vinegar (5% acetic acid) on

the surface of the heating module and clean it with a proper tool.

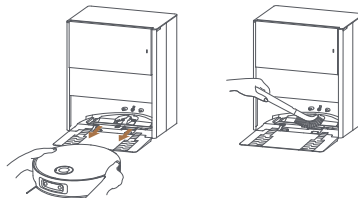


Note:

- To prevent scalding, wait until the surface of the heating module cools down to room temperature before cleaning.
- An appropriate descaler can also be used in accordance with the instructions it provides.
- Do not add white vinegar or descaler directly into the clean water tank to help prevent malfunction.
- Do not use sharp tools or corrosive liquids such as hydrochloric acid to clean the heating module.

Used Water Tank

1. Remove the used water tank, open its cover and pour out the used water.
2. Rinse the used water tank with clean water, and use a proper tool to clean the inner wall of the used water tank.

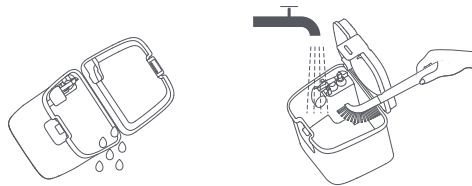


Note: The float ball in the used water tank is a movable part. Do not apply too much force when cleaning it to avoid damaging it.

Routine Maintenance


Dust Bag

1. Remove the dust tank cover and discard the dust bag.

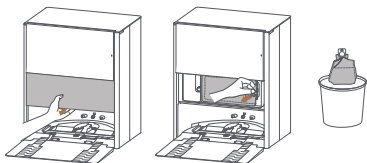


Note: Pulling upwards on the handle will seal the bag to prevent the dust and debris from accidentally falling out.

2. Remove the dust and debris from the filter with a dry cloth.

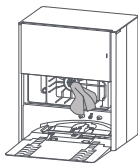


3. Install a new dust bag and reinstall the dust tank cover.

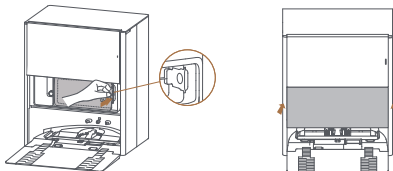


Dust Box and Filter

1. Remove the robot cover and press the dust box clip to remove the dust box.

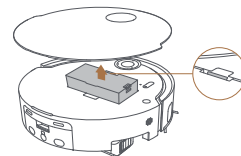


2. Open the dust box cover, remove the filter, and then empty the dust box. Gently tap the basket of the filter to remove the dirt.

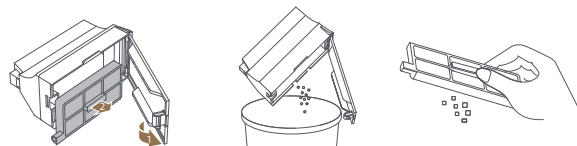

Note: Do not attempt to clean the filter with a brush, a finger or sharp objects to prevent damage.

3. Rinse the dust box and filter with water and dry them completely before reinstalling.

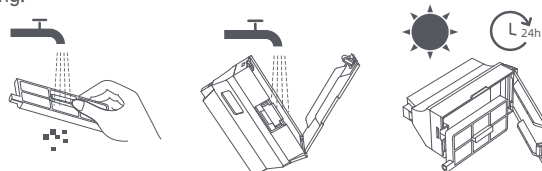


Note:

- Rinse the dust box and filter with clean water only. Do not use any detergent.
- Use the dust box and filter only when they are completely dry.


Routine Maintenance

Side Brush

Unscrew the side brush with a screwdriver, clean the hair from the brush, and then screw it back on.

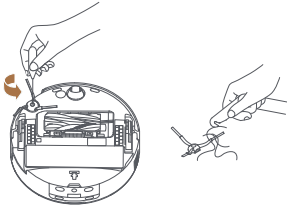

Omnidirectional Wheel

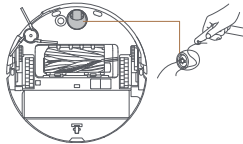


Note:


- Use a tool such as a small screwdriver to separate the axle and tire of the omnidirectional wheel. Do not use excessive force.
- Rinse the omnidirectional wheel under the running water and put it back after drying it completely.

Main Brushes

1. Press the brush guard clips inward to remove the brush guard, and then lift the brushes out of the robot.

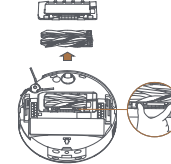


 2. Pull out the brushes as shown in the figure. Use a proper tool to remove any hair tangled in the brushes. After cleaning, push the brushes firmly into the main brush holder until they click into place.




Note: Be careful while pulling out the main brushes to prevent injury.

 3. With the screen-printed arrows facing upwards, insert the main brush holder into the slots downwards in an inclined way.



 
4. Align the front end of the brush guard with the slot, insert it downwards in an inclined way, and then press it into place.




Routine Maintenance

Mop Assembly


1. Press and slide the mop assembly clip at the illustrated angle to remove the mop assembly.

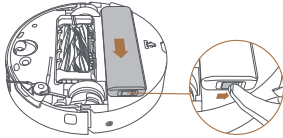

 
2. Detach the mop from the bracket and use a proper tool to remove the hair tangled in the bracket.



 3. Install the new mop to the bracket, ensuring it is in place. Then firmly press the mop assembly clip to secure the mop.




4. Push the mop assembly back into the compartment until it fits into the slot and clicks into place.

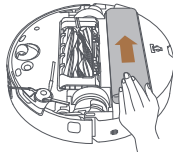

Note: It is normal for the slot to rotate automatically during installation.


Mop Assembly Compartment and Filter

Remove the mop assembly from the robot. Clean the mop assembly compartment and filter to prevent blockage.

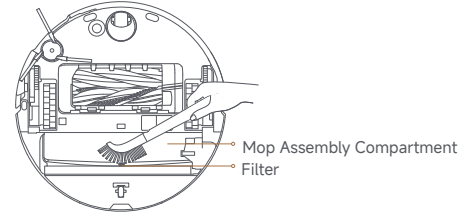

Used Water Box


1. Press the clip of the used water box to remove it.
2. Open the cover of the used water box and pour out the used water. Then rinse the box with clean water, and dry it before reinstalling it into the robot.

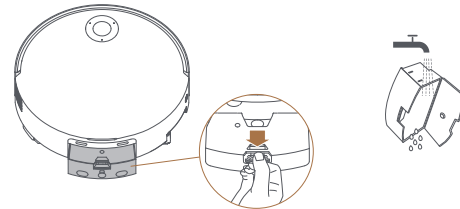

Routine Maintenance

Robot Sensors


Wipe the robot sensors by using a soft and dry cloth, as shown in the figure:

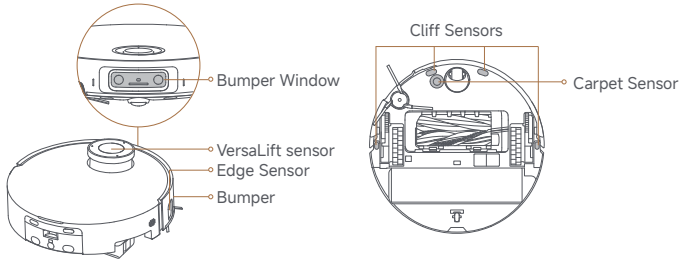

Note: A wet cloth can damage sensitive elements within the robot and the base station. Please use a dry cloth for cleaning.


Auto-empty Vents

Clean the auto-empty vents of the robot and the base station with a soft and dry cloth.

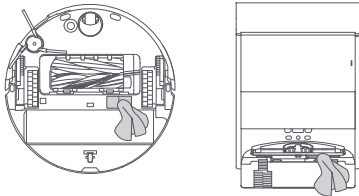

Charging Contacts and Signaling Area

Clean the charging contacts and the signaling area with a soft and dry cloth.

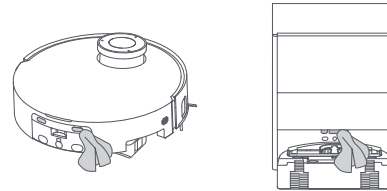

Battery

The robot contains a high-performance lithium-ion battery pack. Make sure that the battery remains well-charged for daily use to maintain optimal battery performance. If the robot is not used for an extended period of time, turn it off and put it away. To prevent damage from over-discharging, charge the robot at least once every three months.


Troubleshooting

| Problem | Solution |
|--------------------------------------|--|
| The robot will not turn on. | <ul style="list-style-type: none"> The battery is low. Recharge the robot on the base station and try again. The temperature of the battery is too low or too high. It is recommended to operate the appliance at a temperature between 0° C (32° F) and 40° C (104° F). |
| The robot will not charge. | <ul style="list-style-type: none"> The base station is not connected to power, please make sure both ends of its power cord are correctly plugged in. The contact between the charging contacts on the base station and the robot is poor, please clean the charging contacts. Check whether there is any foreign object at the connectors of the robot and remove the foreign object if any. |
| The robot fails to connect to Wi-Fi. | <ul style="list-style-type: none"> The Wi-Fi network password is incorrect. Make sure the password used to connect to your Wi-Fi network is correct. The robot does not support a 5 GHz Wi-Fi connection. Make sure the robot is connected to a 2.4 GHz Wi-Fi connection. The Wi-Fi signal is weak. Make sure the robot is in an area with good Wi-Fi coverage. The robot may not be ready to be configured. Please exit and re-enter the app, and then try again as instructed. |

| Problem | Solution |
|--|---|
| The robot cannot find and return to the base station. | <ul style="list-style-type: none"> The route for returning to charge is blocked, e.g. the door is closed. The base station is disconnected from power or moved when the robot is not on it. Please connect the base station to the power supply or place the robot onto the base station to charge. There are too many obstructions around the base station. Place the base station in a more open area. Moving the robot may cause it to re-position itself, and it will recreate a map if re-positioning fails. If the robot is too far from the base station, it might not be able to automatically return on its own, in which case you will need to manually place the robot onto the base station. Wipe the signaling area on the base station to remove dust or debris. |
| The robot gets stuck in front of the base station and cannot return to it. | <ul style="list-style-type: none"> Check whether there is enough space on both sides or in front of the base station to prevent the robot from being blocked. The robot may slip if the floor in front of the base station is overly wet. If so, clean the excess water before trying again. It is recommended to move the base station to a different place and try again. Make sure the ramp extension plate is installed properly. |

Troubleshooting

| Problem | Solution |
|---|--|
| The robot will not turn off. | <ul style="list-style-type: none"> • The robot cannot be turned off when it is charging. It is recommended to move the robot from the base station, and then press and hold the power button for 3 seconds to turn it off. • If the robot cannot be turned off by performing step 1, press and hold the power button for 10 seconds to forcibly turn off the robot. If the problem persists, please contact after-sales service. |
| The charging speed is slow. | <ul style="list-style-type: none"> • It takes about 4.5 hours to fully charge the robot when its battery is low. • If you operate the robot at temperatures outside of the specified range, the charging speed will automatically slow down to extend the battery life. • The charging contacts on both the robot and the base station may be dirty, please wipe them with a dry cloth. |
| The noise increases while the robot is operating. | <ul style="list-style-type: none"> • Check whether the dust box filter is clogged. If so, clean it or replace it. • A hard object may be caught in the main brushes or the dust box. Check and remove any hard object. • The main brushes or the side brush may become tangled. Check and remove any foreign objects. • Switch the suction mode to Standard or Quiet. |

| Problem | Solution |
|--|---|
| The robot moves without following the set route. | <ul style="list-style-type: none"> • Objects such as power cords and slippers should be organized before using the robot. • Working on wet slippery surfaces causes the main wheel to slip. It is recommended to dry the wet places before using the robot. • Wipe the bumper window on the robot with a clean, soft cloth to keep them clean and unobstructed. |
| The robot misses the rooms to be cleaned. | <ul style="list-style-type: none"> • Make sure that the doors of the rooms to be cleaned are open. • The place in front of the room to be cleaned may be wet and slippery, causing the robot to slip and work abnormally. Please try drying the floor before using the robot. |
| The robot will not resume cleaning after charging. | <ul style="list-style-type: none"> • Make sure that the robot is not set to the Do Not Disturb (DND) mode, which will prevent it from resuming cleaning. • The robot will not resume cleaning after you manually place the robot on the base station or send the robot to charge via the app or the button . |

Troubleshooting

| Problem | Solution |
|--|---|
| The station cannot automatically empty the dust box. | <ul style="list-style-type: none"> • Check whether the dust bag in the dust tank is full. • If the dust bag is not full, check whether there is any obstruction at the auto-empty vents of the robot, the base station, or the dust box. If any, clean the blocked part in time. |
| The water level in the washboard is abnormal. | <ul style="list-style-type: none"> • Check whether the seal on the used water tank is loose or not correctly installed, and manually reset it if so. If the problem persists, please contact the after-sales service team. • Gently press down on the used water tank to make sure it is installed correctly. • Remove the washboard filter and check whether the sewage drain outlet is blocked and clean it. • Check the cleaning solution. Do not add any liquid other than the officially-approved cleaning solution. |

| Problem | Solution |
|---|---|
| The mop assembly is raised abnormally. | <ul style="list-style-type: none"> • Please remove the mop assembly to check if there is any foreign object stuck in it, and try to restart the robot. If the problem persists, please contact the after-sales service team. |
| There is water under the clean water tank or around the seal. | <ul style="list-style-type: none"> • When taking out the clean water tank, some water in the pipe may be left under the tank or around the seal. This is normal. Please wipe with a dry cloth. |

For more support, contact us via <https://dreame.com.au>

Specifications

Robot

| | |
|----------------------|--------------------------------|
| Model | RLR81CE |
| Charging Time | Approx. 4.5 hours |
| Rated Voltage | 14.4 V $\overline{\text{---}}$ |
| Rated Power | 75 W |
| Operation Frequency | 2400-2483.5 MHz |
| Maximum Output Power | < 20 dBm |

Under normal use of condition, this equipment should be kept a separation distance of at least 20 cm between the antenna and the body of the user.

Rechargeable Lithium-ion Battery Pack

| | |
|----------------|---------------------------------|
| Model | R2401-4S2P-XDEV/R2401-4S2P-MMYD |
| Type | Li-ion |
| Number | 1 |
| Rated Capacity | 5.8 Ah |

Base Station

| | |
|--|----------------------------------|
| Model | RCZE0308 |
| Rated Input | 220-240 V \sim 50-60 Hz |
| Rated Output | 20 V $\overline{\text{---}}$ 2 A |
| Rated Power (during dust emptying) | 650 W |
| Rated Power (during hot water cleaning) | 410 W |
| Rated Power (during charging and drying) | 89 W |

Note:

- Rated Power (during hot water cleaning) is determined by the power value during the representative period (water temperature 25°C).
- Rated Power (during charging and drying) is determined by the power value during full load period (ambient temperature 23°C \pm 2°C).

Battery Disposal and Removal

The built-in lithium-ion battery contains substances that are hazardous to the environment. Before disposing of the battery, make sure the battery is removed by qualified technicians and discarded at an appropriate recycling facility.

- the battery must be removed from the appliance before it is scrapped;
- the appliance must be disconnected from the supply mains when removing the battery;
- the battery is to be disposed of safely.

CAUTION:

Before removing the battery, disconnect the power and run out the battery as much as possible.

Unneeded batteries should be discarded at an appropriate recycling facility.

Do not expose to high temperature environment to avoid risks of explosion.

Under abusive conditions, liquid may be ejected from the battery. If contact occurs, flush with water and seek medical help.

 
Removal Guide:

1. Turn over the robot, use a proper tool to remove the screws on the back of the robot, and then remove the cover.
2. Unplug the terminals between the battery and PCB board to remove the battery.

Warranty

1. Dreame is liable to the consumer for any lack of conformity in material or workmanship not detectable at the time of the purchase.
2. Warranty period: 3 years, starting from the date the product is sold to the consumer or delivered to the consumer (which ever occurs later). If the territory where the consumer is located had different regulation, local regulations prevail.
3. The warranty will not be applicable in the following cases:
 - a) Issues due to carelessness, use, or installation that does not comply with the instructions provided by Dreame.
 - b) Tampering and/or modifications of the product by entities or individuals not expressly authorized by Dreame.
 - c) Damage due to accidental causes and/or negligence on the part of the consumer, with particular reference to external parts.
 - d) Parts subject to wear that do not have manufacturing defects.
 - e) No valid purchasing document (receipt, invoice, or other) is provided to certify the date the product was purchased.
 - f) The model and/or numbers of the product on the purchase certificate is not consistent with the model and/or numbers shown on the product.
4. For more warranty information, please refer to the official Dreame website: <https://dreame.com.au>
5. For further assistance, please contact us via 07-3737-3143 or support.au@dreame.tech.
6. The after-sales service (including quality warranty) in diverse regions is solely applicable to the local version of Dreame products. Please contact the after-sales service in the region where your product version originates for support.

The word "dreame" is the abbreviation of Dreame Technology Co., Ltd. and its subsidiaries in China. It is the transliteration of the company's Chinese name "追觅", which means striving for excellence in every endeavor and reflects the company's vision of continuous pursuit, exploration and search in technology.



For more support, contact us via <https://dreame.com.au>

Manufactured by: Dreame Trading (Tianjin) Co., Ltd.

Made in China



AU-A00