

**KITCHEN PRO**



# PRECISION GLASS Kitchen Scale 5kg

## IMPORTANT

Read and follow all warnings and instructions before assembly and use.  
Keep this manual for future reference.

# Specifications

---

- Model number: 723394/723395
- Dimensions: 21x16x1.9cm
- Voltage: 2xAAA batteries (not included)

# Product features

---

- Weighs up to 5kg
- Tare function
- LED screen with overload and low battery indicators
- Battery operated (two AAA batteries required, not included)
- Auto-off function
- Supports multiple units: g, kg, lb, oz, mL and milk mL
- High precision strain gauge sensor

# Display icons

---



# Button functions

**UNIT** Mode conversion, Unit conversion

**⏻/ZERO** Turn on/ Turn off/ Zero/ Tare

 
## Unit button:

- Short press: Switch between weight/water/milk modes
- Long press: Convert between metric and imperial units

## On/Off/Zero button:

- Turn the scale on/off
- Reset (zero) the display
- Tare function for multi-step weighing

# Working modes

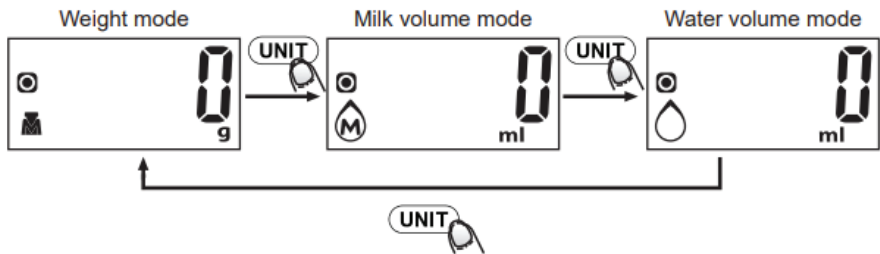

1. **Weight mode** – Standard weight measurement (g, kg, lb:oz)
2. **Milk volume mode** – Volume measurement for milk (mL or fl'oz)
3. **Water volume mode** – Volume measurement for water (mL or fl'oz)

Use the UNIT button to cycle between these modes.

## To convert unit systems

To switch between Metric (g, mL) and Imperial (lb:oz, fl'oz):

1. Press the UNIT button to select your desired mode (weight, water, milk)
2. Long press the UNIT button to convert between Metric and Imperial systems

## Note:

- When in g mode, the default volume unit is mL
- When in lb:oz mode, the default volume unit is fl'oz


# Operating instructions

---

## 1. Placement



- Place the scale on a solid, level surface.
- Avoid sloped or uneven surfaces.

## 2. Switching modes and units

- Press  to turn on the scale.
- Press UNIT to switch between modes (g, mL, M, fl'oz, lb:oz).

# Weighing instructions

---


1. Press  to turn on the scale. Display shows 0.
2. Press UNIT to choose the desired mode (g, mL, fl'oz, etc.)
3. Place a container (if needed) on the scale. Otherwise, place the object directly on the scale.
4. Press ZERO to zero out the container weight if using.
5. Add the item to be weighed. Display shows weight or volume.
6. Press and hold  to turn off the scale, or the scale will auto shut-off after 2 minutes of inactivity.

Do not exceed the maximum capacity of the scale (5kg).

# Zero or Tare function

---

 
This function allows you to weigh multiple items in sequence without removing previous items.

1. Place the first load on the scale
2. Press  to reset the display to "0"
3. Add the next item – only the new item's weight will be shown

### Condition 1: “ZERO” function

When total weight  $\leq$  4% of scale's max capacity


(e.g., 80g for 2000g max, 200g for 5000g max)

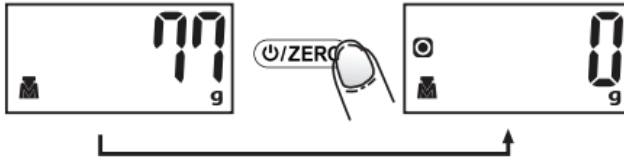

- LCD shows “0g” or “-----” after pressing ZERO
- “0g” and a circular icon indicate ZERO is activated
- Max capacity remains unchanged

### Condition 2: “TARE” function

 When total weight  $>$  4% of scale's max capacity

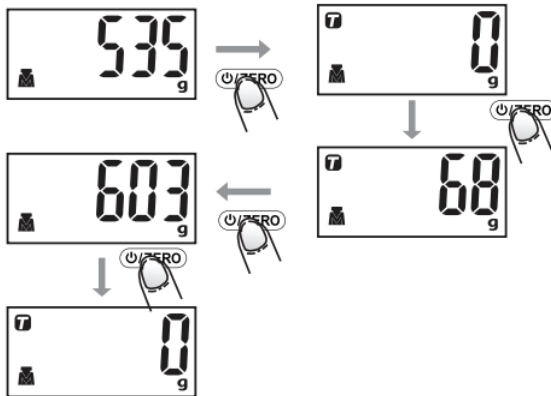


- LCD shows “0g” and a “T” icon when TARE is activated
- Max weight capacity is reduced by the tared amount
- Pressing ZERO again shows total weight of all items

#### Under this condition:

 To weigh additional items, continue using the ZERO button to reset the display to “0” before each new item.

# Warnings

---

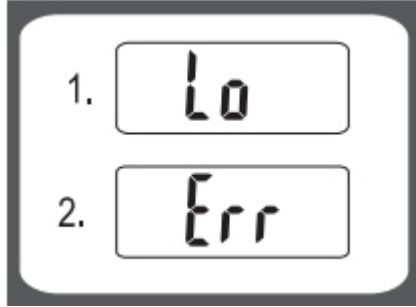

1. Lo – Low battery. Replace with a new battery
2. Err – Overload. Remove excess weight to avoid damage
  - Max weight capacity is 5kg

## Cleaning and safety

---

1. Clean with a soft, damp cloth. Do not immerse in water or use corrosive cleaners.
2. Clean surface immediately after contact with fats, oils, vinegar, or spices.
3. Always use it on a flat, stable surface.
4. This is a precision instrument. Handle with care, avoid dropping or shaking the scale.
5. Keep away from heat sources.
6. If the scale fails to power on, replace the AAA batteries.

Intended for household use only. Not suitable for commercial use.

## **Get in touch with Customer Service**

If you experience any issues with your Kitchen Pro Precision Glass Kitchen Scale 5kg, get in touch with our Customer Service team by email at [customerservice@kitchenwarehouse.com.au](mailto:customerservice@kitchenwarehouse.com.au) or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday.

## **Warranty**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

## **Guarantee**

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the five year warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

## **Exclusions**

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

## **How to claim**

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

## **Limitations**

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

# **KITCHEN PRO**

**Distributed by Kitchen Warehouse.**

Kitchen Pro is a registered trademark of Kitchen Warehouse Pty Ltd.

The printed material appearing in this document and related packaging is protected by copyright. Illustrations in this manual are for reference only and may differ from the actual product.

**Kitchen Warehouse Pty Ltd**

1 Pensioner Guard Road

North Fremantle, WA, 6159

[www.kitchenwarehouse.com.au](http://www.kitchenwarehouse.com.au)

1800 332 934

[customerservice@kitchenwarehouse.com.au](mailto:customerservice@kitchenwarehouse.com.au)