

KITCHEN PRO



PREP STAINLESS STEEL Drum Grater

IMPORTANT

Read and follow all warnings and instructions before assembly and use.
Keep this manual for future reference.

Specifications

- Model number: 723000
- Dimensions: 23.8x13x23.4cm
- Material: ABS, TPE, stainless steel

Product features

- Easy to use, hand crank grater
- Perfect for grating cheese, vegetables, chocolates, garlic, nuts and more
- Three interchangeable grater options: slicer, fine grater, coarse grater
- Ensures consistent, even grating with less effort
- Safer design keeps fingers away from blades
- Removable parts are easy to clean
- Suction lock secures the base to your benchtop
- Hand washing is recommended for the cylinder
- Removable graters are dishwasher safe

Safety precautions

- The blade is sharp. Keep fingers away from the grating surface during use.
- Always keep this product out of reach of children.
- Do not use excessive force while grating.

Get to know the Kitchen Pro Prep Stainless Steel Drum Grater



Product components

1. Food pusher
2. Cylinder (drum housing)
3. Base
4. Suction lock
5. Suction base
6. Crank handle
7. Handle lock (knob)
8. Fine grater drum
9. Slicer drum
10. Coarse grater drum

Drum functions and best uses

Slicer drum

Best for: Cucumbers, zucchini, potatoes, carrots, beetroot, radish



Fine grater drum

Best for: Nuts, walnuts, chocolate, cheese, crackers, garlic



Coarse grater drum

Best for: Cheese, carrots, potatoes, zucchini, beetroot

Not suitable for: Frozen fruits, very hard vegetables, onions



Assembly and operation

 
Step 1: Secure the base

Place the grater on a clean, dry countertop. Press down the suction lock firmly to secure the base in place.




Step 2: Install the cylinder

Align the cylinder with the groove on the base and slide it into position until fully seated.

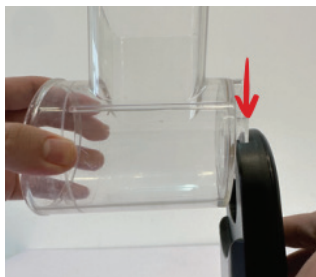


Step 3: Insert the drum blade

 Select the desired drum blade and slide it into the cylinder, ensuring it passes completely through the opening.

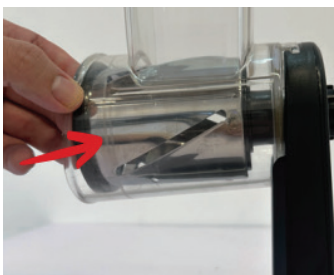

Step 4: Attach the handle

 Hold the drum blade firmly with one hand. Insert the crank handle into the drum and turn the handle lock clockwise until fully secured.

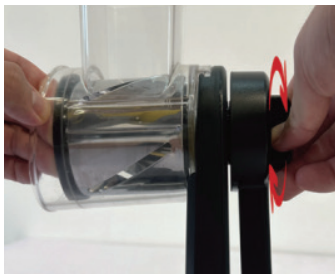

Step 5: Start grating

1. Place food into the cylinder.
2. Use the food pusher to press ingredients down gently.
3. Turn the crank handle clockwise to begin grating.

 


Disassembly instructions

1. Hold the drum blade securely and turn the handle lock counterclockwise to remove the crank handle and drum.



2. Pull the cylinder upward to remove it from the base.

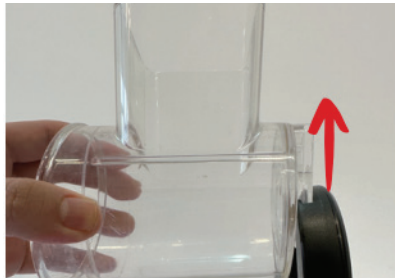

3. Lift the suction lock to release the base from the benchtop.



Cleaning and maintenance

- Disassemble all parts before cleaning.
- Hand washing is recommended for the cylinder. Removable graters are dishwasher safe.
- Dry all components thoroughly before reassembly or storage.
- For best performance, use fresh, firm ingredients and clean the grater immediately after use.

Get in touch with Customer Service

If you experience any issues with your Kitchen Pro Prep Stainless Steel Drum Grater, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the five year warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

KITCHEN PRO

Distributed by Kitchen Warehouse.

Kitchen Pro is a registered trademark of Kitchen Warehouse Pty Ltd.

The printed material appearing in this document and related packaging is protected by copyright. Illustrations in this manual are for reference only and may differ from the actual product.

Kitchen Warehouse Pty Ltd

1 Pensioner Guard Road

North Fremantle, WA, 6159

www.kitchenwarehouse.com.au

1800 332 934

customerservice@kitchenwarehouse.com.au