

KITCHEN PRO



PREP STAINLESS STEEL Rotary Grater

IMPORTANT

Read and follow all warnings and instructions before assembly and use.
Keep this manual for future reference.

Specifications

- Model number: 722999
- Dimensions: 20x14x9cm
- Material: ABS, stainless steel

Product features

- Easy to use, hand crank grater
- Perfect for grating cheese, chocolates, nuts and more
- Ensures consistent, even grating with less effort
- Safer design keeps fingers away from blades
- Removable parts are easy to clean
- Dishwasher safe
- Includes: 1 x main grater body with chamber, 1 x stainless steel grating cylinder, 1 x rotating handle (arm)

Safety precautions

- The blade is sharp. Keep fingers away from the grating surface during use.
- Always keep this product out of reach of children.
- Do not use excessive force while grating.

Assembly instructions

1. Slide the stainless steel grating cylinder into the grater chamber.
2. Insert your fingers lightly into the grating cylinder to hold it securely in place.
3. Attach the rotating handle by screwing it clockwise until it is firmly fixed.

Tip: Ensure the handle is tightly secured before use to avoid slipping during operation.

Disassembly instructions

1. Insert your fingers into the stainless steel grating cylinder and hold it securely.
2. Rotate the handle anti-clockwise to unscrew and remove it from the cylinder.
3. Slide the stainless steel grating cylinder out of the chamber.

The cylinder should release smoothly without force.

Operating instructions

Step 1: Load food

Place the cheese or other food item into the grater chamber,



Step 2: Start grating

1. Press down gently on the food with one hand.
2. Rotate the handle clockwise with the other hand to begin grating.

Continue rotating until the desired amount is grated.



Cleaning and maintenance

- Disassemble the grater before cleaning.
- Wash all parts with warm, soapy water and dry thoroughly.
- Do not use abrasive cleaners or scouring pads on the stainless steel cylinder.
- Ensure all parts are completely dry before reassembly or storage.
- Store the grater in a dry place.

Get in touch with Customer Service

If you experience any issues with your Kitchen Pro Prep Stainless Steel Rotary Grater, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the five year warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

KITCHEN PRO

Distributed by Kitchen Warehouse.

Kitchen Pro is a registered trademark of Kitchen Warehouse Pty Ltd.

The printed material appearing in this document and related packaging is protected by copyright. Illustrations in this manual are for reference only and may differ from the actual product.

Kitchen Warehouse Pty Ltd

1 Pensioner Guard Road

North Fremantle, WA, 6159

www.kitchenwarehouse.com.au

1800 332 934

customerservice@kitchenwarehouse.com.au