

KITCHEN PRO



PREP STAINLESS STEEL Chopper

IMPORTANT

Read and follow all warnings and instructions before assembly and use.
Keep this manual for future reference.

Specifications

- Model number: 722993
- Dimensions: 9.8x9.8x23cm
- Material: ABS, PP, PS, stainless steel

Product features

- Push to easily chop ingredients straight into the bowl
- Rotating stainless steel blade delivers even chopping results
- Detachable base to easily dispense ingredients
- Dishwasher safe

Safety precautions

- This food chopper is designed for chopping fruits and vegetables for household kitchen use only.
- The blade is extremely sharp. Handle with care during unpacking, use and cleaning.
- Keep fingers away from blades at all times.
- Do not use hard foods such as ice or bones.
- Keep out of reach of children.
- The bowl and blade are dishwasher safe. The handle should be hand washed.

Get to know the Kitchen Pro Prep Stainless Steel Chopper

Rubberised plunger
Supports better grip while chopping

Heavy-duty blade housing
Stainless steel finish

Extra sharp chopping blade
Made with stainless steel

Rotating scrapers
Keep food off the sides for
even cutting

1x container
Ideal size for meal prep

Non-slip rubber base
Firm and stable



Assembly instructions (before first use)

1. Place the blade guide onto the stainless steel blade housing, ensuring the blades are properly aligned and protruding upward.



2. Attach the clear container to the top unit by turning it clockwise until it locks securely in place.

3. Ensure all parts are firmly connected before use.



Operating instructions

1. Remove the non-slip rubber base base from the unit.
2. Place food inside the clear container.
3. Reattach the base and place the upright chopper on a flat, stable surface.
4. Hold the chopper firmly and press the chopping handle downward using the palm of your hand.



5. Repeat pressing until the desired chopping consistency is achieved.



Removing chopped ingredients

1. Turn the chopper upside down.



2. Carefully remove the base to release the chopped ingredients.



3. Empty contents into a bowl or container.



Disassembly after use

1. Twist the top section of the clear container counterclockwise and pull upward to remove it.



2. Remove the blade guide from the base carefully, avoiding direct contact with the blades.



Cleaning and maintenance

- Rinse all parts under running water immediately after use.
- Use mild dish soap if necessary.
- Allow all parts to dry completely before reassembly or storage.
- Caution: Blades are extremely sharp, handle with care.

Get in touch with Customer Service

If you experience any issues with your Kitchen Pro Prep Stainless Steel Chopper, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the five year warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

KITCHEN PRO

Distributed by Kitchen Warehouse.

Kitchen Pro is a registered trademark of Kitchen Warehouse Pty Ltd.

The printed material appearing in this document and related packaging is protected by copyright. Illustrations in this manual are for reference only and may differ from the actual product.

Kitchen Warehouse Pty Ltd

1 Pensioner Guard Road

North Fremantle, WA, 6159

www.kitchenwarehouse.com.au

1800 332 934

customerservice@kitchenwarehouse.com.au