

**KITCHEN
PRO**



PREP STAINLESS STEEL Vegetable Chopper Pro

IMPORTANT

Read and follow all warnings and instructions before assembly and use.
Keep this manual for future reference.

Specifications

- Model number: 722992
- Dimensions: 27.5x11.8x11.8cm
- Material: ABS, silicone, stainless steel

Product features

- Slices and chops fruit and vegetables with ease and precision
- Interchangeable small and large dicing blades
- Includes a mandoline slicer with a grater, fine grater and julienne slicer
- Lid has a lock button
- Includes cleaning scraper, stainless steel container, mandoline base

Safety precautions

- This chopper is designed for chopping and slicing fruits and vegetables for household kitchen use only. The blades are extremely sharp. Handle with care during unpacking, use and cleaning.
- Always keep hands and fingers away from cutting blades.
- Use the food guard when slicing or grating.
- Be cautious when inserting or removing blades.
- Keep out of reach of children.

Get to know the Kitchen Pro Prep Stainless Steel Vegetable Chopper Pro



Product components

1. Chopper lid
2. Pusher lock button
3. Pusher
4. Chopper base
5. Blade lock button
6. Stainless steel container
7. Small dicer
8. Large dicer
9. Food guard
10. Mandoline base
11. Slicer
12. Grater
13. Fine grater
14. Julienne slicer
15. Cleaning scraper

Operating instructions

How to use the chopper function

Assembly

1. Place the chopper base securely onto the stainless steel container.



2. Flip the chopper lid open.



3. Select the desired dicer blade and insert the tabs on top of the blade into the chopper base.



4. Slide the blade lock button to the locked position to secure the blade.



5. Place food onto the cutting blade with the flat side facing down.
 - Ensure food stays entirely within the blade area for best results.



6. Close the lid and use both hands to firmly and swiftly push down on the chopper lid to chop.
7. Repeat as needed until the desired cut size is achieved.



Cleaning food residue from the chopping pusher and blades

Use the cleaning scraper to remove food residue from the pusher and blades.



Removing and reinstalling chopper blades

1. To remove a blade, slide the blade lock button to the release position and lift the blade out from the removal slot.



2. To remove the pusher, pull the pusher lock button upward and lift the pusher out.



3. To reinstall the pusher, pull the lock button upward, align the pusher at the hinge end, press down, then release the lock button.



How to use the mandoline function

Assembly

1. Place the mandoline base onto the stainless steel container.



5. Slide the food smoothly across the blade while holding the mandoline base firmly with your other hand.



2. Select the desired mandoline blade and insert it into the mandoline base.
3. Press down firmly until you hear a click, indicating it is locked in place.




Removing the mandoline blades

To remove the blade, lift it upward firmly from the blade removal slot.



4. Secure the food using the food guard, inserting the food onto the guard pins.

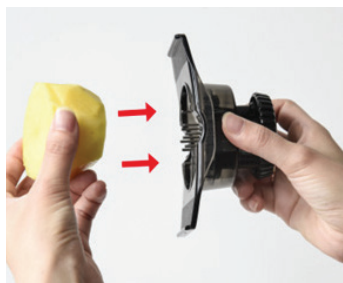

Cleaning and maintenance

- Rinse all parts immediately after use.
- Use mild dish soap and warm water.
- Use the cleaning scraper to safely remove trapped food from blades.
- Allow all parts to dry completely before storage.
- Top rack dishwasher safe, excluding the blades which should be hand washed.

Get in touch with Customer Service

If you experience any issues with your Kitchen Pro Prep Stainless Steel Chopper Pro, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

KITCHEN PRO

Distributed by Kitchen Warehouse.

Kitchen Pro is a registered trademark of Kitchen Warehouse Pty Ltd.

The printed material appearing in this document and related packaging is protected by copyright. Illustrations in this manual are for reference only and may differ from the actual product.

Kitchen Warehouse Pty Ltd

1 Pensioner Guard Road

North Fremantle, WA, 6159

www.kitchenwarehouse.com.au

1800 332 934

customerservice@kitchenwarehouse.com.au