

# KITCHEN PRO



## PREP STAINLESS STEEL Mandoline Slicer

### IMPORTANT

Read and follow all warnings and instructions before assembly and use.  
Keep this manual for future reference.

# Specifications

---

- Model number: 722990
- Dimensions: 35x15.1x8.3cm
- Material: ABS, PP, TPE, stainless steel

## Product features

---


- Designed for slicing, julienning, grating and shredding fruits and vegetables with precision and safety
- Six interchangeable blades: wavy blade, slicer blade, grater, fine shredder, coarse shredder, julienne slicer
- Includes a blade holder, finger guard and cleaning brush
- Dishwasher safe

## Safety precautions

---

- This mandoline slicer is designed for slicing fruits and vegetables for household kitchen use only.
- The blade is extremely sharp. Handle with care during unpacking, use and cleaning.
- Always use the finger guard when slicing, julienning, grating or shredding.
- Keep hands and fingers away from cutting surfaces.
- Do not use it if any component is damaged.
- This product is not intended for use by children.

## Get to know the Kitchen Pro Prep Stainless Steel Mandoline Slicer

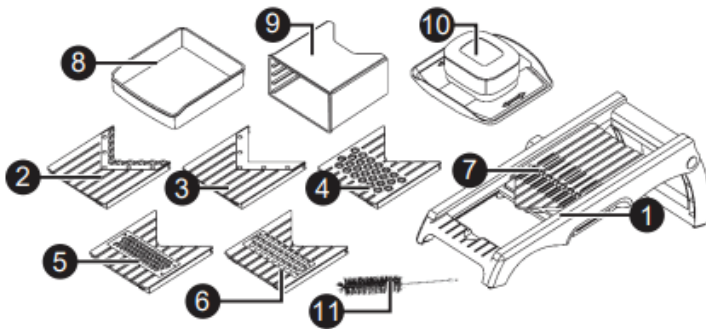

### Product components

- |                          |                    |
|--------------------------|--------------------|
| 1. Main unit             | 7. Julienne slicer |
| 2. Wavy blade            | 8. Food tray       |
| 3. Straight slicer blade | 9. Blade holder    |
| 4. Grater                | 10. Finger guard   |
| 5. Fine shredder         | 11. Cleaning brush |
| 6. Coarse shredder       |                    |

### Before first use

- Carefully unpack all components.
- Wash blades, food tray, and finger guard with warm soapy water.
- Dry thoroughly before assembly.
- Blades are extremely sharp. Handle with care.

# Operating instructions

## Using the julienne slicer

### Step 1: Prepare the unit

Pull out the support stand located at the back of the main unit before placing it on a flat surface.

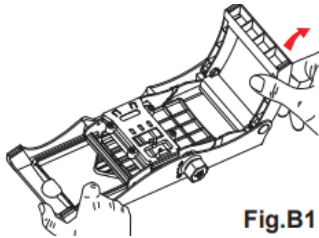


Fig.B1

### Step 4: Select julienne thickness

Slide the knob forward for 6mm cuts or backward for 9mm cuts.

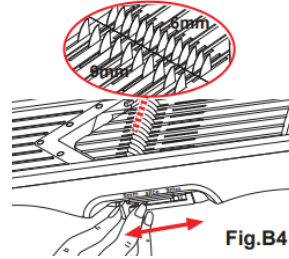


Fig.B4

### Step 2: Insert the julienne blade

Insert the julienne slicer blade securely into the blade slot.

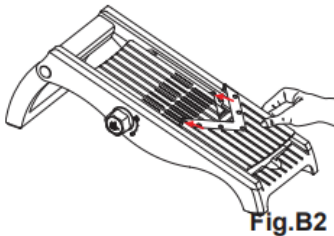


Fig.B2

Hold the finger guard and slide it up and down along the food runway to julienne.

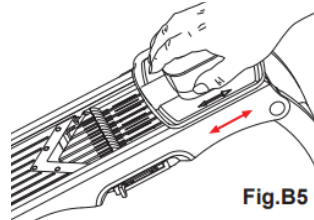


Fig.B5

### Step 3: Secure food

Attach the food to the pins of the finger guard. Trim food if needed so it fits securely.


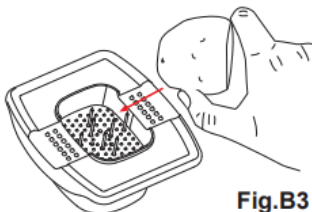


Fig.B3

## Using the straight slicer

Step 1: Select slice mode

Slide the knob to "slice" mode.


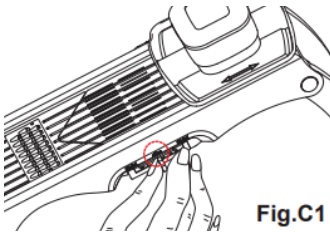


Step 2: Adjust thickness

Unlock the adjustable dial by pushing in the knob on the side of the main unit.


- Turn clockwise for thinner slices
- Turn counterclockwise for thicker slice

Thickness range: 1 to 7 mm

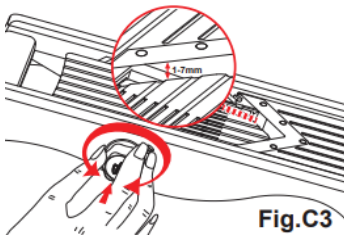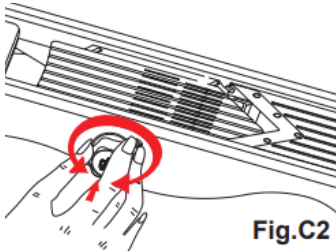

Step 3: Slice


Secure food with the finger guard and slide it up and down the runway using steady pressure.

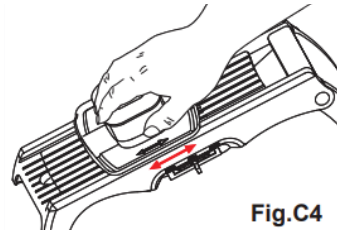

## Using the grater/shredder


Step 1: Insert blade

Insert the desired grater or shredder blade into the main unit.

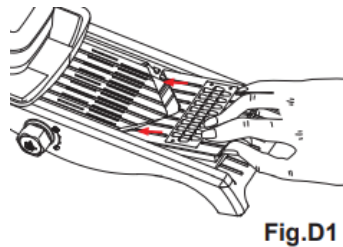

Step 2: Select slice mode

Slide the knob to "slice" mode.

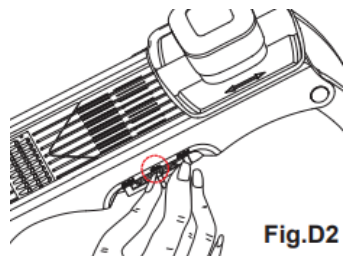

### Step 3: Align blade

Turn the knob clockwise until the blade and food runway are aligned in a straight line.

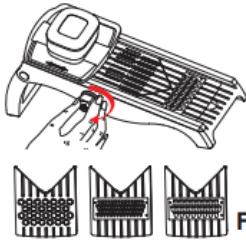


Fig.D3

### Step 4: Grate or shred

Secure the food with the finger guard and slide it up and down along the runway.

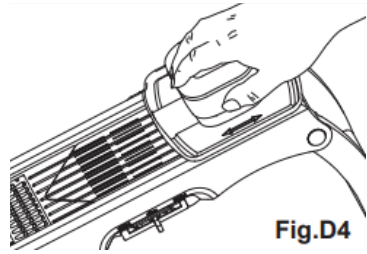


Fig.D4

## Cleaning and maintenance

---

- Clean immediately after use to prevent food from drying on blades.
- Use the included cleaning brush to remove food residue.
- Wash blades and accessories by hand with warm soapy water.
- Dry all parts thoroughly before storage.
- Do not soak blades for extended periods.

## Storage

---

- Store blades in a safe location using the blade holder.
- Keep the slicer fully assembled or locked when not in use.
- Store out of reach of children.

## **Get in touch with Customer Service**

If you experience any issues with your Kitchen Pro Prep Stainless Steel Mandoline Slicer, get in touch with our Customer Service team by email at [customerservice@kitchenwarehouse.com.au](mailto:customerservice@kitchenwarehouse.com.au) or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday.

## **Warranty**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

## **Guarantee**

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

## **Exclusions**

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

## **How to claim**

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

## **Limitations**

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

# **KITCHEN PRO**

**Distributed by Kitchen Warehouse.**

Kitchen Pro is a registered trademark of Kitchen Warehouse Pty Ltd.

The printed material appearing in this document and related packaging is protected by copyright. Illustrations in this manual are for reference only and may differ from the actual product.

**Kitchen Warehouse Pty Ltd**

1 Pensioner Guard Road

North Fremantle, WA, 6159

[www.kitchenwarehouse.com.au](http://www.kitchenwarehouse.com.au)

1800 332 934

[customerservice@kitchenwarehouse.com.au](mailto:customerservice@kitchenwarehouse.com.au)