

ANOTHER

INSULATED Pump Pot

IMPORTANT

Read and follow all warnings and instructions before assembly and use.

Keep this manual for future reference.

Specifications

- Model: 95022Black/725193

Product features

- Vacuum insulated, double wall 18/8 stainless steel
- One-hand pump action
- For hot and cold beverages
- Leakproof and spill free
- BPA-free

Safety precautions

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - Farmhouses.
 - By clients in hotels, motels and other residential type environments.
 - By bed and breakfast type environments.
- Do not use attachments or accessories which are not recommended by the manufacturer.
- The product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
- Always keep the pump pot upright to prevent leakage and injury.
- Always lift using the handle.
- Do not lift by the lid, as locking buttons may not be fully engaged.
- Do not overfill. Leave at least 1cm space from the top of the stainless steel inner section to allow proper lid insertion.
- Keep away from heat sources such as microwaves, stovetops and coffee makers.
- Do not use dry ice or carbonated beverages, as pressure may cause forceful lid ejection.
- Do not store milk or perishable liquids for extended periods.
- Do not leave contents inside for prolonged periods, as gas buildup from spoilage may cause the stopper to eject.
- Do not drink directly from the pump pot as contents may be extremely hot.

Operating instructions

Opening the lid

1. Squeeze the two lid locking buttons located above the spout.
2. Lift and open the lid.
3. Remove the tube assembly and set it aside.

Preheating (recommended for best performance)

1. Fill the pump pot with hot tap water.
2. Attach the stopper/lid securely and close the lid by squeezing the lid locking buttons.
3. Allow it to stand for eight to 10 minutes.
4. Empty completely before filling with liquid.

Important: Failure to preheat will significantly reduce thermal performance. Always ensure the lid is properly attached during preheating to prevent spills.

If you hear a hissing sound

If filled with very hot liquid, pressure may build up inside the unit due to air expansion.

- Carefully open the lid for approximately one minute to release pressure.
- Close the lid securely before use.

Removing the lid for cleaning

1. Open the lid to a 90° angle.
2. Hold the lid firmly in one hand.
3. Press the lid release buttons located at the rear of the lid.
4. Lift to remove.

To refit:

Insert the lid into the rear slot and press down until it clicks into place.

Dispensing beverages

1. Lift the pump handle on top of the lid to the open position.
2. Place a cup or container under the spout.
3. Press the pump mechanism down to dispense.
4. To close, push the pump handle switch toward the back of the product until it returns to the closed position.

Cleaning and maintenance

1. Do not fully immerse the unit in water.
2. Do not use in the dishwasher.
3. Exterior cleaning:
 - Wipe with a soft cloth and mild soapy water.
 - Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these may damage the surface.
4. Interior cleaning:
 - Wash with warm, mild soapy water after each use.
 - Rinse thoroughly with clean water.
5. For stubborn stains:
 - Fill the unit with hot water.
 - Add one dessert spoon of bicarbonate of soda.
 - Leave overnight.
 - Rinse thoroughly before next use.
 - Do not attach the lid while using this cleaning method.

Tube assembly

- Clean and rinse thoroughly after every use.
- Ensure no residue remains to prevent blockages or bacterial buildup.

Get in touch with Customer Service

If you experience any issues with your Another Insulated Pump Pot, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the five year warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

ANOTHER

Distributed by Kitchen Warehouse.

Another is a registered trademark of Kitchen Warehouse Pty Ltd.

The printed material appearing in this document and related packaging is protected by copyright.

Illustrations in this manual are for reference only and may differ from the actual product.

Kitchen Warehouse Pty Ltd

1 Pensioner Guard Road

North Fremantle, WA, 6159

www.kitchenwarehouse.com.au

1800 332 934

customerservice@kitchenwarehouse.com.au