

WOLSTEAD

Swift Glass Air Fryer 4-in-1

Owner's Manual



IMPORTANT:

Read and follow all warnings and instructions before assembly and use.
Keep this manual for future reference.

SPECIFICATIONS

- Model number: 710277
- Voltage: 220-240V ~ 50/60Hz
- Power consumption: 1500W
- Temperature range: 60°C to 200°C
- Timing range: 1 to 60 minutes

PRODUCT FEATURES

Discover a smarter, simpler way to cook with the Wolstead Swift Glass Air Fryer. With two detachable glass pots and airtight lids, you can cook, serve and store all in one. Its 4-in-1 functionality delivers crispy, even results every time.

- Four cooking presets: Bake, Reheat, Turbo Crisp, Air Fry
- Cook, serve and store in the two borosilicate glass cooking pots with airtight storage lids
- The cooking pots are made from durable dishwasher safe borosilicate glass, and the lids are BPA-free
- Ceramax™ non-stick ceramic coating on the inner frying racks for healthier cooking and easy cleaning, free from PFAS, PTFE, PFOA, lead and cadmium
- Cooking pots nest into one another for compact storage
- Anti-slip, heat resistant feet that are removable for easy cleaning
- Digital display to adjust temperature and time
- Versatile cooking pot sizes for large batches or individual meals: Large pot: 4L / Small: 1.5L
- Cooking pots double as storage containers
- Includes: 1 x air fryer, 1 x large glass cooking pot 4L with lid and a Ceramax™ non-stick ceramic frying rack, 1 x small glass cooking pot 1.5L with lid and a Ceramax™ non-stick ceramic frying rack

CERAMAX NON-STICK COATING

The inner frying rack features a hard, durable, ceramic non-stick coating called Ceramax™ which is a healthier alternative to traditional non-stick. Ceramax™ is thermo-resistant, easy to clean, and free from lead, cadmium, PTFE, PFOA, and PFAS.

SAFETY PRECAUTIONS


When using this electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:


1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label.
3. If the electrical cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is intended to be used in household and similar applications such as:
 - a. Staff kitchen areas in shops, offices and other working environments.
 - b. Farmhouses.
 - c. By clients in hotels, motels and other residential type environments.
 - d. By bed and breakfast type environments.
7. To protect against electric shock, do not place the cord, plug or the base of the appliance in water or any other liquid.
8. Do not use attachments or accessories which are not recommended by the manufacturer.
9. The product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
10. Always use the appliance on a firm and stable surface and keep it 30cm from other objects and the wall to ensure heat is easily released.
11. Before using the appliance, one of the two glass cooking pots must be installed. The cooking pot is necessary for all functions.
12. Do not touch or remove the inner cooking pot with your hands while the appliance is in operation, wait until it cools.
13. Do not place plastic plates, bowls, or film on or inside the appliance during operation.
14. Do not place the appliance on or near a hot surface, including a gas or electric stove, or in the oven.
15. Do not move the appliance when in use.
16. Steam is released through the rear exhaust port during operation.
17. Do not cover the rear exhaust port while the appliance is running. This can affect the uniformity of cooking and it may damage the appliance or cause it to overheat.
18. Do not place anything on top of the appliance while in operation or when storing.
19. Appliance surfaces can get hot during and after operation. To prevent burns or personal injury always use heat resistant oven mitts or gloves when opening the lid of the appliance or removing the inner cooking pot and other included accessories.
20. Allow the appliance to cool before cleaning, disassembling, putting in or taking out parts, and storing.
21. Use indoors only.

PROTECTING THE GLASS COOKING POTS

1. Avoid sudden temperature changes to prevent the glass from breaking. Do not add cold items to hot glass or vice versa.
2. Do not let glass come in contact with cold or wet surfaces immediately after heating.
3. Always allow glass to cool to room temperature before cleaning.
4. The glass cooking pots are not oven safe. Do not use direct heat sources other than the appliance or a regular microwave.
5. Do not put empty containers in a microwave.
6. Avoid impacts or contact with hard objects.
7. Do not use cracked or chipped glass.
8. If glass breaks, wear protective gloves and handle it carefully. Do not recycle broken glass.
9. Glass pots are dishwasher safe or can be hand washed with warm soapy water. Plastic lids are only for storage use and must be hand washed with warm soapy water. The lids are not safe for use in the oven, microwave or dishwasher.

GET TO KNOW THE WOLSTEAD GLASS AIR FRYER 4-IN-1

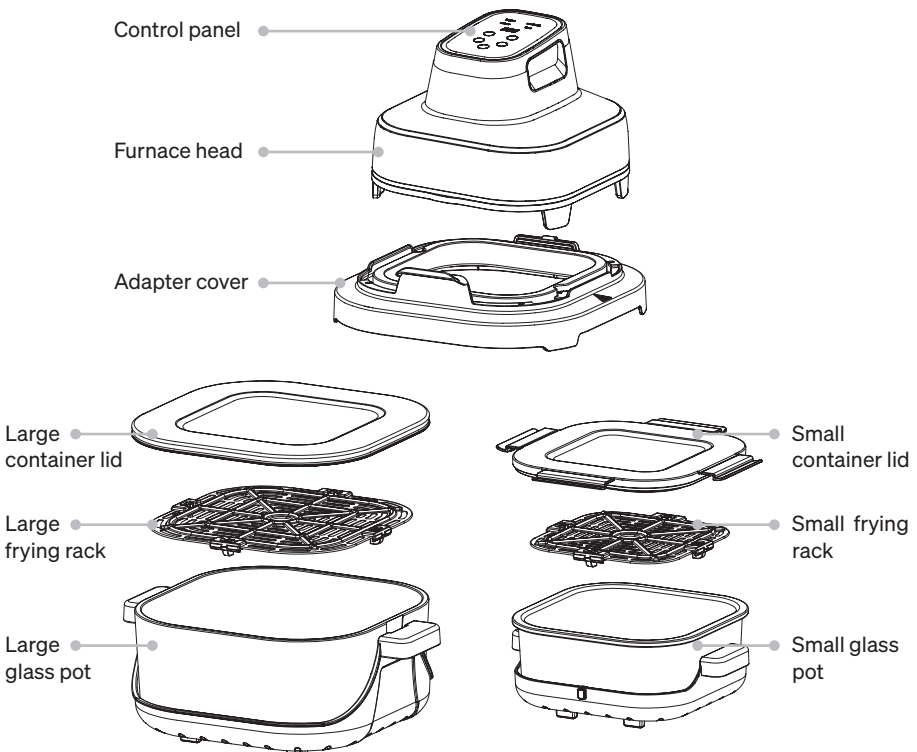


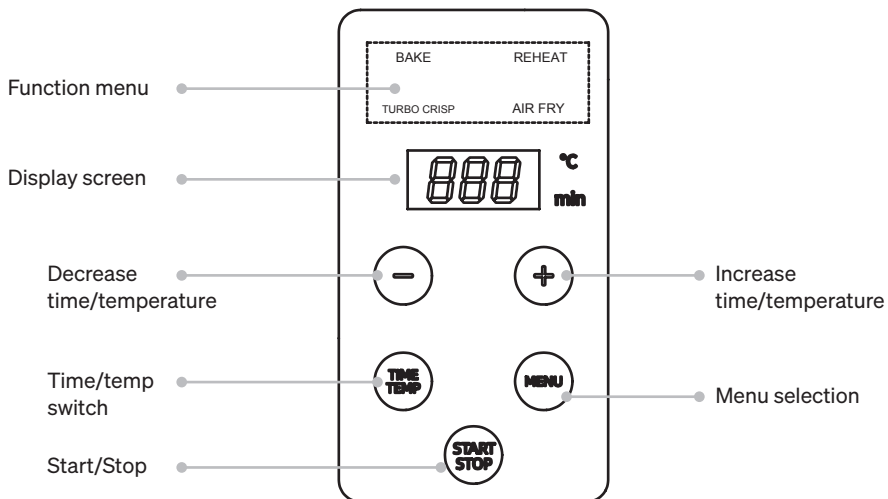


HOW TO SET UP THE AIR FRYER FOR USE

1. Place the appliance on a flat, stable surface.


- Ensure at least 30cm space on each side and over 30cm above.
- Keep away from walls, curtains, or flammable materials.

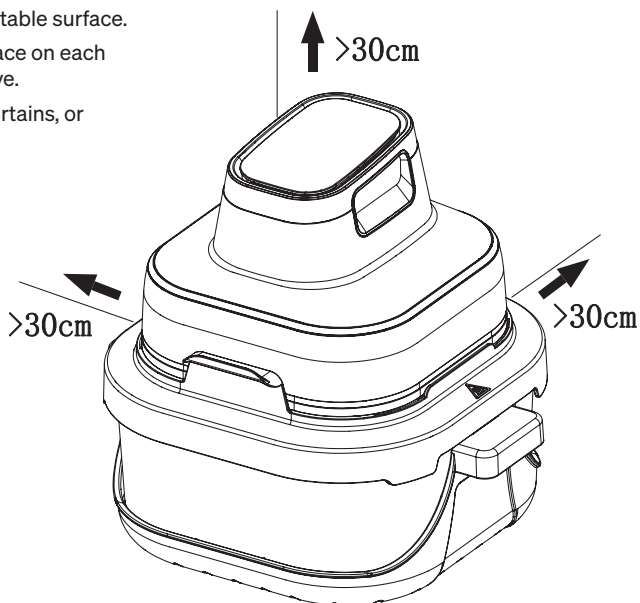

2. Insert the frying rack into the glass pot, then place the furnace head on top.
- When using the larger glass cooking pot, attach the adapter cover before inserting the furnace head.
 - You should hear a “click” when the head is securely placed.

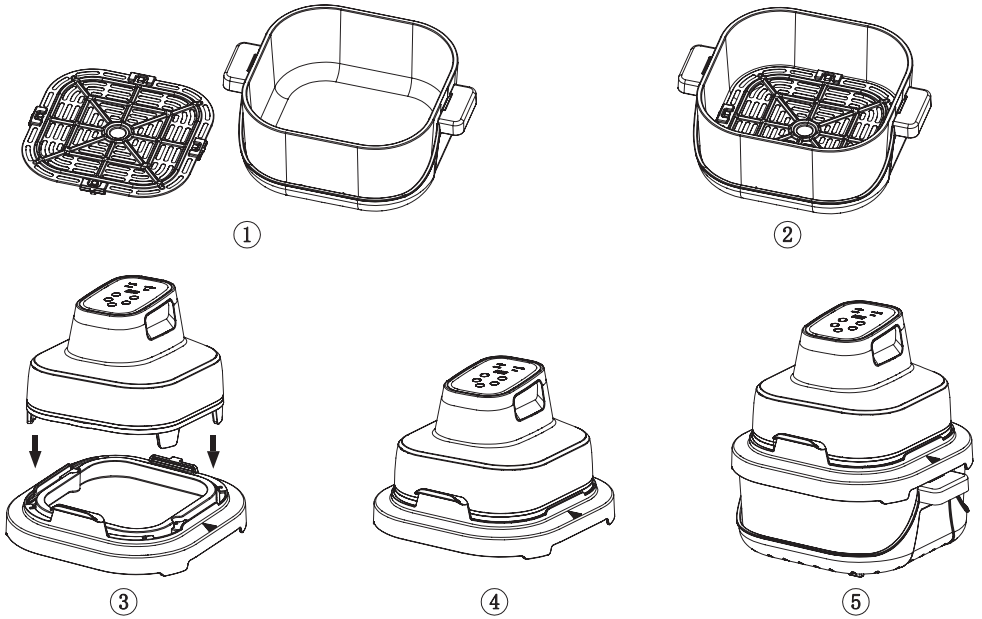


3. If using the smaller glass pot, insert the frying rack into the glass pot, then place the furnace head on top.
- Attach the adapter cover before inserting the furnace head.

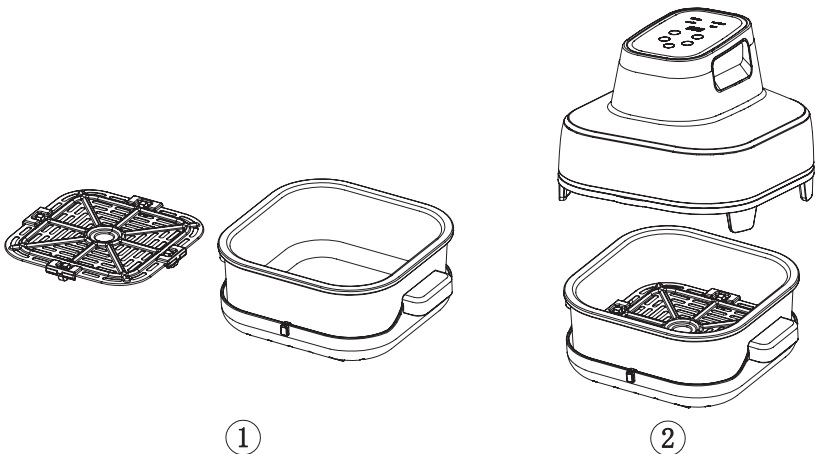


4. For storage:

- Use the lid only after the container and food have cooled completely.

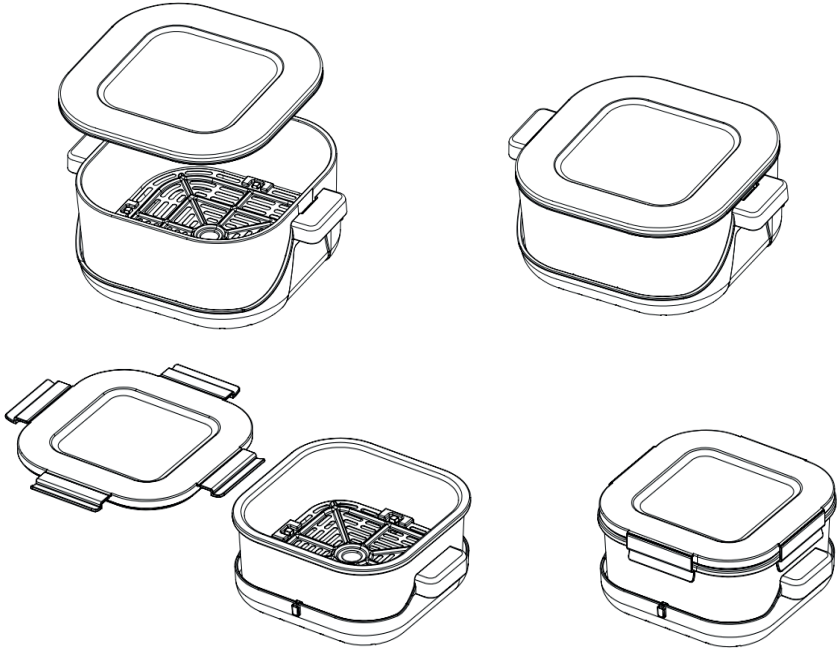


5. Disassembly and reassembly:

- Open the clasp on the air fryer base to remove or replace the glass cooking pot.
- Do one side first for easier handling.

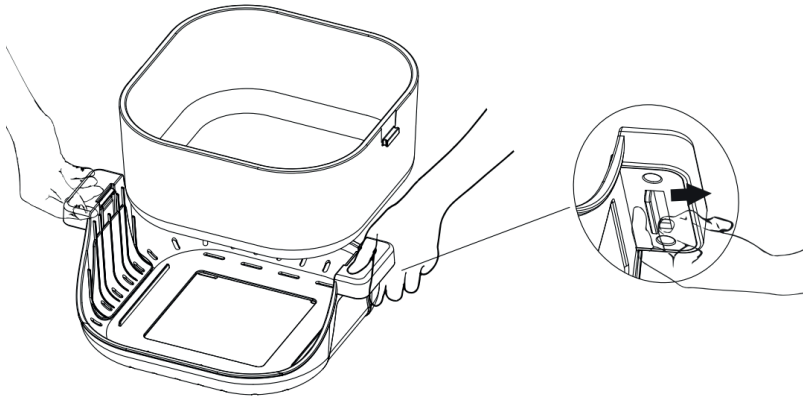

Handling hot surfaces



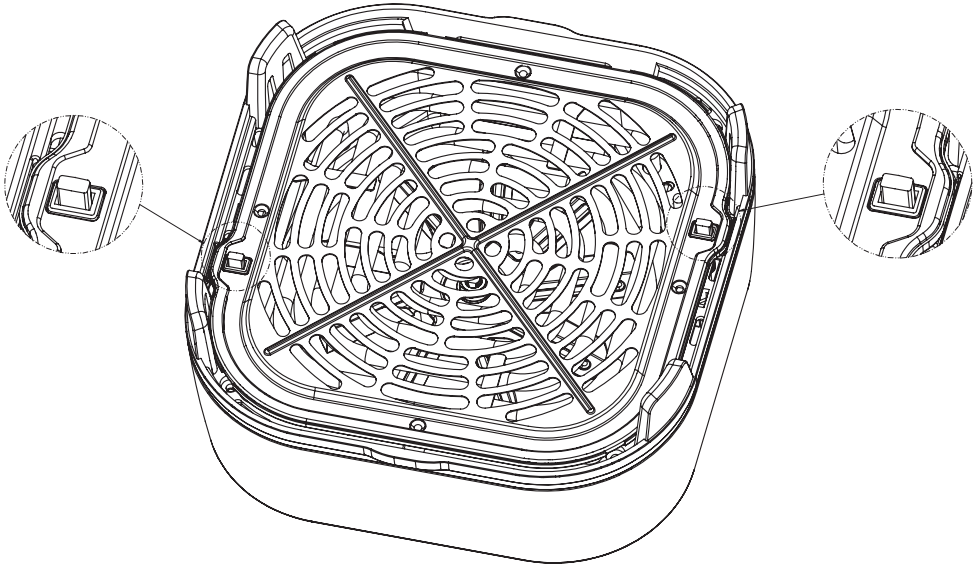


- Use heat resistant gloves to handle hot glass containers.
- Do not place the hot glass cooking pots directly on a cold or wet surface.
- Always wait until the glassware has cooled before washing.
- Do not overfill the glass cooking pots. Leave some space for food expansion.
- Ensure both safety buttons are pressed for the unit to operate.



Before first use

- **Check voltage:** Ensure that the voltage of your home matches the voltage indicated on the air fryer.
- **Remove all packaging:** Dispose of all packaging materials, including any temporary labels on the air fryer to avoid the risk of fire.
- **Clean the glass cooking pots and frying racks** with warm soapy water and a non-abrasive sponge and dry completely. To extend the life of these parts, we recommend hand washing. Never immerse the main body of the appliance in water.
- Before first use, it's important to run the air fryer for 15 minutes to cook off any residues. To do this, turn the air fryer on and choose the air fry preset program. At the completion of the cycle, open the frying basket to release any oily smoke. Note: A slight odour or smoke during first use is normal and will fade over time.

Operating instructions







1. Plug in the appliance. The screen and indicator light  will flash.
2. Press the Start/Stop  button to enter standby mode.
3. Use the Menu button  to select your cooking function. Options will flash on the screen.
4. If idle for 60 seconds, the appliance will return to standby.
5. After selecting a menu option, press Start/Stop  again to begin cooking.
6. Press and hold Start/Stop  for 3 seconds to turn the unit off.

Preset functions



Function	Default temp	Default time	Temp range	Time range
BAKE For baking goods and desserts	200°C	12 min	60 to 200°C	1 to 60 min
REHEAT Reheat leftovers with a crispy finish	180°C	3 min	60 to 200°C	1 to 60 min
TURBO CRISP Best for frozen or pre-packaged foods	200°C	15 min	60 to 200°C	1 to 60 min
AIR FRY Fry with minimal oil for a crunchy texture	200°C	20 min	60 to 200°C	1 to 60 min

Note: Larger food portions may require longer times.

Adjusting the time and temperature

1. Press the Time/Temp  button to switch modes.
2. Use “+”  and “-”  to adjust the temperature.
3. Press Time/Temp  again, then use “+”  and “-”  to adjust time.

Pause function

1. Removing the furnace head will pause the appliance. The screen will display “OPEN.”
2. Only the Start/Stop  button works while paused.
3. Press Start/Stop  again to resume operation.

Note: If left idle for 10 minutes, the appliance enters standby mode.

Tip: Ensure you turn ingredients regularly during the cooking cycle for even results.

After cooking

1. The appliance will beep three times when done.
2. The heater stops, but the fan will continue to cool down the appliance.
3. After cooling, remove the furnace head and set it on a safe surface.
4. Turn off the appliance and unplug it from the wall.

Safety tip: Handle hot containers with care. Add a few extra minutes if food isn't fully cooked.

Cleaning and maintenance

- Ensure the appliance is unplugged before cleaning. Keep the lid open after removing your food to help it to cool faster.
- The glass pots are dishwasher safe but we recommend hand washing. The lids, frying racks and the body of the appliance are not dishwasher safe.
- Dry all parts thoroughly before storing.
- If food residue or grease is stuck on the glass cooking pots or frying racks, soak them in warm, soapy water before cleaning.
- Gently wipe the furnace head with a damp cloth.
- Never use metal cleaning tools, as they may damage the appliance. Do not immerse the machine in water or any other liquids.

Troubleshooting

Code	Description	Possible Cause
E1	NTC sensor error	Temperature sensor is open
E2	NTC sensor error	Temperature sensor is short circuited
E3	Circuit board error	Communication failure
E4	High temperature protection active	Pot temperature exceeds 240°C

Get in touch with Customer Service

If you experience any issues with your Wolstead Swift Glass Air Fryer 4-in-1, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday.

90 day money back guarantee

We promise you a full refund within 90 days if your Wolstead product does not fulfil your expectations. This guarantee applies to qualified purchases of all Wolstead branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the five year warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

WOLSTEAD

Distributed by Kitchen Warehouse.

Wolstead is a registered trademark of Kitchen Warehouse Pty Ltd. The printed material appearing in this document and related packaging is protected by copyright.

Kitchen Warehouse Pty Ltd
1 Pensioner Guard Road
North Fremantle, WA, 6159
www.kitchenwarehouse.com.au
1800 332 934
customerservice@kitchenwarehouse.com.au