

Salisbury&Co

HEIRLOOM ELECTRIC CERAMIC KETTLE

Owner's Manual



IMPORTANT

Read and follow all warnings and instructions before assembly and use. Keep this manual for future reference.

SPECIFICATIONS

- Model number: 719790 / 719791
- Voltage: 220 - 240V ~ 50/60Hz
- Wattage: 1500W
- Maximum capacity: 1L

PRODUCT FEATURES

This charming ceramic electric kettle, adorned with a vintage inspired design, brings a touch of nostalgia to every kitchen. Its generous one litre capacity and powerful heating element ensure fast, effortless boiling, so your favourite brews are always just moments away. Paired with two matching ceramic porcelain mugs, this delightful set transforms tea time into a truly enchanting experience.

- One litre capacity makes four cups
- Automatic shut-off and boil dry protection
- 360 degree swivel base for left or right handed use
- Includes two ceramic porcelain mugs
- Wooden handle and on/off switch

SAFETY PRECAUTIONS

CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.

When using this electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is intended to be used in household and similar applications such as:
 - A. Staff kitchen areas in shops, offices and other working environments.
 - B. Farmhouses.
 - C. By clients in hotels, motels and other residential type environments.
 - D. By bed and breakfast type environments.
7. To protect against risk of electric shock, do not place cord, plug or the base of the appliance in water or any other liquid, and avoid spillage onto the connector.
8. Do not use attachments or accessories which are not recommended by the manufacturer.
9. To avoid danger, the product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
10. Always use the appliance on a firm and stable surface. Keep the appliance 10cm from other objects and the wall to ensure heat is easily released.
11. The kettle is protected against damage due to operation with insufficient water by means of an automatic safety shut-off. This cuts off the power when the heating element gets too hot.
12. If the kettle ever runs dry while operating, first unplug the kettle from power, then pour in sufficient cold water to cool down the heating element. The safety cut-out will automatically reset.
13. Before first use, fill the kettle with water, boil it and then empty it. The kettle is then ready for use.
14. Never use the kettle without the lid firmly in position.
15. The kettle will switch off automatically when the water has finished boiling. You can switch the kettle off manually before boiling using the on/off switch. The heating element surface is subject to residual heat after use.
16. Only use the kettle for heating water. Do not attempt to heat any other liquids.
17. Do not overfill the jug as boiling water may overflow. Do not fill above the MAX or below the MIN mark.
18. Do not touch the hot surfaces of the kettle or allow your hand to come into contact with the steam from the spout or the lid aperture.
19. The kettle will only work with the supplied matching base.
20. Before cleaning, always disconnect from power and allow the kettle to cool. Never immerse the kettle in water at any time.

OPERATING INSTRUCTIONS

1. Open the lid and fill the jug.
2. Always fill between the MIN and MAX fill lines. Don't boil the kettle if the water is below the MIN fill line or above the MAX fill line.
3. Do not forget to close the lid firmly after filling.
4. Insert the mains plug into a wall socket.
5. Press the ON/OFF switch to start boiling. The indicator light will come on when the switch is in the "I" position.
6. When the water boils, the appliance will switch off automatically and the power light will go off. The switch will be in the "O" position.

CLEANING AND MAINTENANCE

- Wipe the exterior of the kettle with a clean, damp cloth after unplugging from the power. Do not use abrasive cleaners.
- Soap or detergent can be used to remove troublesome stains.
- To descale, add one litre of ordinary vinegar to the kettle and boil it. Switch off and let the vinegar remain inside the kettle overnight. Discard the vinegar the next morning and then refill the kettle with clean water up the MAX line and boil again.
- Throw away this boiled water to remove any remaining scale and vinegar and rinse the inside of the kettle with clean water.

WARRANTY

Get in touch with Customer Service

If you experience any issues with your Salisbury & Co Heirloom Ceramic Electric Kettle, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday.

90 day money back guarantee

We promise you a full refund within 90 days if your Salisbury & Co product does not fulfil your expectations. This guarantee applies to qualified purchases of all Salisbury & Co branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discolouration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

Salisbury&Co

Distributed by Kitchen Warehouse.

Salisbury & Co is a registered trademark of Kitchen Warehouse Pty Ltd.
The printed material appearing in this document and related packaging is
protected by copyright. Illustrations in this manual are for reference only
and may differ from the actual product.

Kitchen Warehouse Pty Ltd
1 Pensioner Guard Road
North Fremantle, WA, 6159
www.kitchenwarehouse.com.au
1800 332 934
customerservice@kitchenwarehouse.com.au