

# WOLSTEAD

## Aroma Coffee, Nut and Spice Grinder

Owner's Manual



### **IMPORTANT:**

Read and follow all warnings and instructions before assembling and using the appliance. Keep this manual for future reference.

**WOLSTEAD** Aroma Coffee, Nut and Spice Grinder 714983

# SPECIFICATIONS

Model: 714983

Voltage: 220V-240V ~ 50/60Hz

Power consumption: 200W

# PRODUCT FEATURES

Experience the power of precision with the Wolstead Aroma Coffee, Nut and Spice Grinder which delivers effortless, efficient grinding for nuts, spices, coffee beans, herbs, tea and more.

- Includes two stainless steel grinding cups with lids for easy storage
- One grinding cup has a two prong blade and one has a four prong blade for different ingredient types
- Easy one touch operation, for perfectly ground ingredients in seconds
- Transparent lid to monitor grinding


# SAFETY PRECAUTIONS

When using this electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is intended to be used in household and similar applications such as:
  - i. Staff kitchen areas in shops, offices and other working environments.
  - ii. Farmhouses.
  - iii. By clients in hotels, motels and other residential type environments
  - iv. By bed and breakfast type environments..
7. To protect against electric shock, do not place the cord, plug or the base of the appliance in water or any other liquid.
8. Do not use attachments or accessories which are not recommended by the manufacturer.
9. The product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
10. Always use the appliance on a firm and stable surface and keep it 30cm from other objects and the wall to ensure heat is easily released.

11. Do not place the appliance on or near a hot surface, including a gas or electric stove, or in a heated oven. To protect against risk of electric shock, do not immerse the cord or plug in water or any other liquid.
12. Do not move the appliance when in use.
13. Not suitable for use with external timers or remote controls.
14. Do not immerse the motorized base in water or place it in a dishwasher. Only the transparent top cover may be immersed.
15. Do not remove the cover until the blade has completely stopped.
16. Do not operate the appliance without the cover in place.
17. Check the grinding bowl for foreign objects before each use.
18. For optimal performance, do not grind more than 60g of coffee beans at a time. Grinding 85g or more can overload the motor and may cause the machine to stop or seize.

## GET TO KNOW THE WOLSTEAD AROMA COFFEE, NUT AND SPICE GRINDER

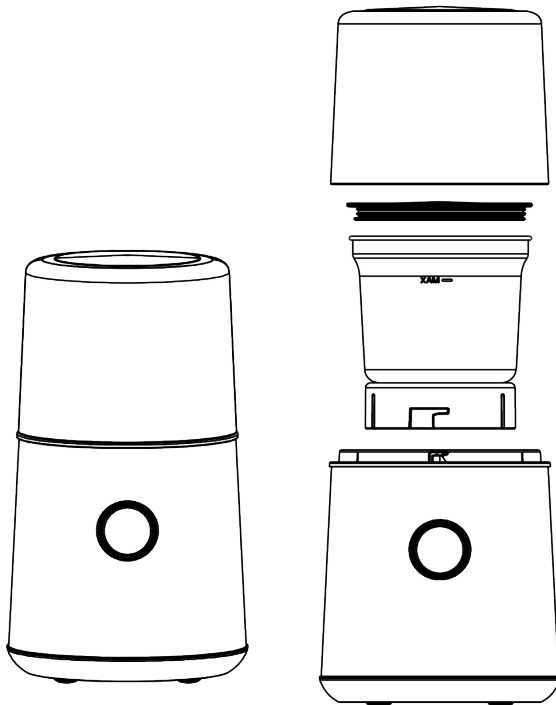

# OPERATING INSTRUCTIONS

## Before first use

1. Remove all packaging materials, promotional labels and tapes from the appliance.
2. Remove all accessories and read this manual carefully. Pay close attention to the operation instructions, warnings and safety guidelines to avoid injury or property damage.
3. Wipe the grinding cup and blades with a damp cloth or sponge to remove any dust.
4. Handle the blades with extreme care — they are sharp.
5. The transparent cover can be washed with water and dried thoroughly.
6. Caution: Do not immerse the motor base in water or fill the grinding cup with water.

## Using your coffee grinder

1. Place the appliance on a flat, stable surface.
2. Assemble the grinding cup onto the motor base. Turn the cup clockwise until you hear a click. To disassemble, turn counterclockwise.
3. Add ingredients to the grinding cup, taking care not to exceed 85g (or 60g for coffee beans), then attach the cup lid, followed by the transparent cover..
4. Plug in the appliance. Press and hold the power button to start grinding. Release the button to stop. Note: Do not operate continuously for more than one minute. Allow the appliance to cool for three minutes between cycles.
5. Observe the grind consistency through the transparent cover.  
Important: If you need to check the grounds, always wait for the blade to stop completely before removing the cover.
6. Once the desired grind is achieved, release the power button and unplug the unit.
7. Remove the lid, disassemble the grinding bowl, and pour out the ground ingredients.

## GRINDING BLADES

The two-prong blade is suitable for dry ingredients such as coffee beans, spices and nuts.

The four-prong blade is suitable for dry ingredients such as coffee beans, spices and nuts, and wet ingredients such as fresh ginger, fresh garlic and fresh onion.

### Grinding tips

1. Coffee grind types:
  - Coarse grind: Best for percolators and coffee urns.
  - Medium grind: Suitable for drip coffee makers and steam espresso machines.
  - Fine grind: Ideal for pump espresso machines.
2. Adjust grinding time based on your taste and the type of coffee beans. The longer time you grind, the finer the grounds will be.

3. For best flavour:
  - Only grind what you need for immediate use.
  - Coffee beans can be stored in an airtight container in the freezer for up to two months and ground while still frozen.
  - Avoid leaving coffee grounds in the grinder for extended periods.
4. Other ingredients you can grind: spices, nuts, ginger, garlic, onion, etc

Warning: Do not exceed the maximum fill line when grinding any food. For optimal performance, do not grind more than 60g of coffee beans at a time. Grinding 85g or more can overload the motor and may cause the machine to stop or seize.

## CLEANING AND MAINTENANCE

1. Always unplug the appliance before cleaning. Do not immerse the motor base, cord, or plug in water or any liquid.
2. Wash the cover with warm water and mild detergent. It is not dishwasher safe. Rinse and dry thoroughly.
3. Wipe the grinding bowl and blades with a dry, lint-free cloth. To prevent injury, handle blades with care.

# WARRANTY

## Get in touch with Customer Service

If you experience any issues with your Wolstead Aroma Coffee, Nut and Spice Grinder, get in touch with our Customer Service team by email at [customerservice@kitchenwarehouse.com](mailto:customerservice@kitchenwarehouse.com), au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday. Alternatively you can use the Live Chat function on our website by visiting [www.kitchenwarehouse.com.au/contact-us](http://www.kitchenwarehouse.com.au/contact-us)

## 90 day money back guarantee

We promise you a full refund within 90 days if your Wolstead product does not fulfil your expectations. This guarantee applies to qualified purchases of all Wolstead branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

## Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

## How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

## Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

## Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

## Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

# WOLSTEAD

Distributed by Kitchen Warehouse.

Wolstead is a registered trademark of Kitchen Warehouse Pty Ltd. The printed material appearing in this document and related packaging is protected by copyright.

Kitchen Warehouse Pty Ltd  
1 Pensioner Guard Road  
North Fremantle, WA, 6159  
[www.kitchenwarehouse.com.au](http://www.kitchenwarehouse.com.au)  
1800 332 934  
[customerservice@kitchenwarehouse.com.au](mailto:customerservice@kitchenwarehouse.com.au)