 


LENOXX®

Wine Cooler

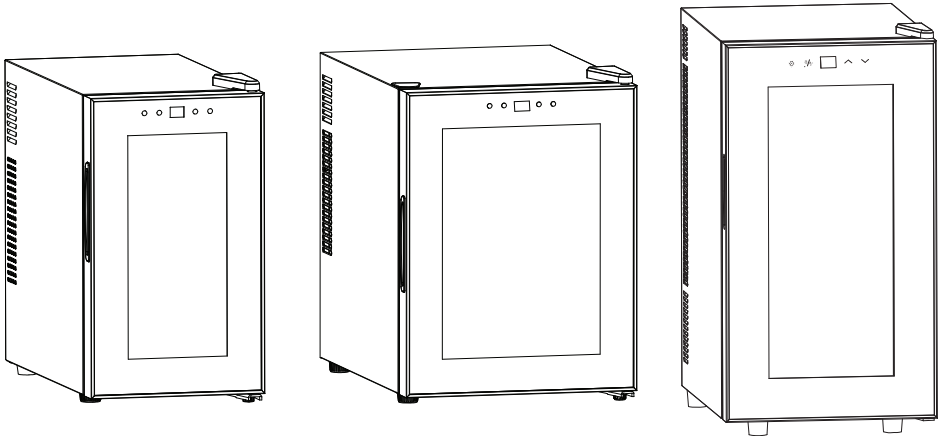

Models: BF8/BF12/BF18 | Batch: PR5384

Carefully read all instructions before use and save for future reference.
HOUSEHOLD USE ONLY

IMPORTANT SAFEGUARDS

PLEASE READ AND SAVE THIS INSTRUCTION MANUAL FOR
FUTURE REFERENCE

Safety Warnings

1. This appliance is not for use by children under 8 years or anyone with reduced physical, sensory, or mental abilities, or lack of experience, unless supervised or instructed by a responsible adult.
2. Children should be supervised and must not play with the appliance.
3. Cleaning and maintenance should not be performed by children without supervision.
4. If the power cord is damaged, it must be replaced by the manufacturer or a qualified technician to prevent hazards.
5. To prevent tipping, place the cooler on a stable, level surface.
6. Make sure the power cord is not trapped or damaged when positioning the cooler.
7. Do not place multiple power outlets or portable power supplies behind the appliance.
8. Keep ventilation openings clear—do not block the fan or air vents.
9. Do not use electrical appliances inside the cooler, unless recommended by the manufacturer.
10. Do not store explosive substances, such as aerosol cans with flammable gas.
11. Children aged 3–8 may help load and unload the cooler under supervision.

Usage Guidelines

1. This wine cooler is intended for household use and similar environments, including staff kitchens, farmhouses, hotels, motels, B&Bs,

 
 
and catering areas.

 
2. Avoid keeping the door open for long periods, as this can raise the temperature inside and affect your drinks.
3. Clean surfaces regularly that come into contact with drinks, and wipe up any spills promptly.
4. If the appliance will not be used for long periods, turn it off, clean, dry, and leave the door open to prevent mould.

Important Notes

- This appliance contains a flammable foaming agent (cyclopentane). Avoid contact with fire during transport or use.
- Do not attempt repairs yourself. Contact a qualified professional if the appliance is damaged.
- When disposing of the appliance, take it to your local authorised disposal station.

COMPONENTS DESCRIPTION

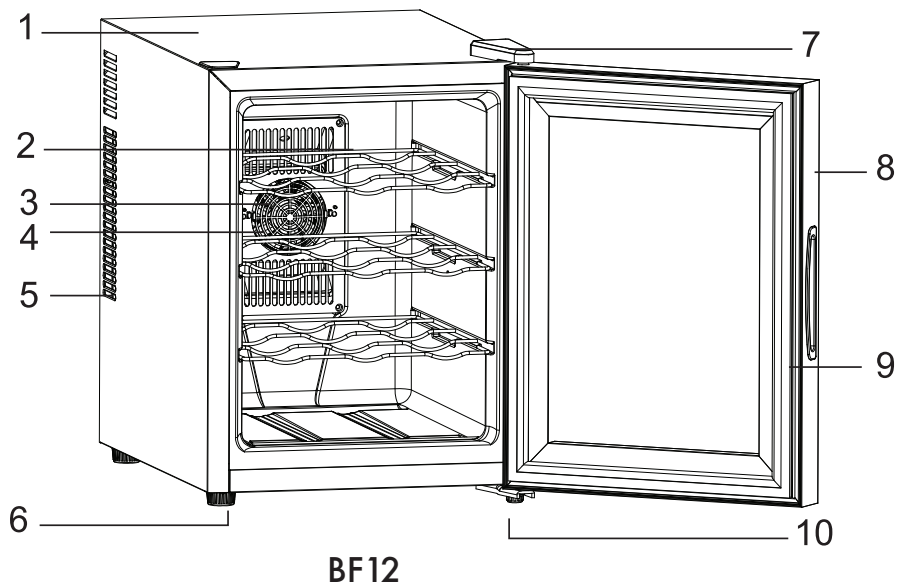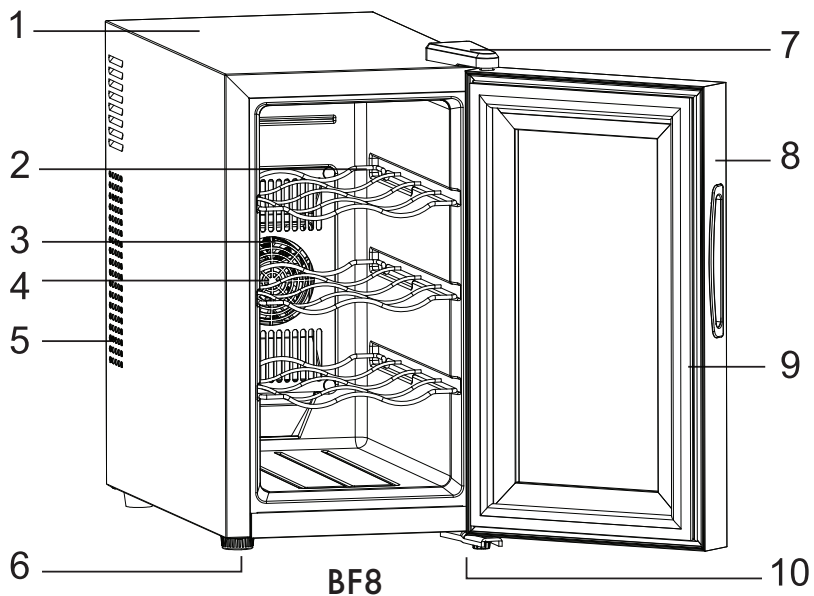

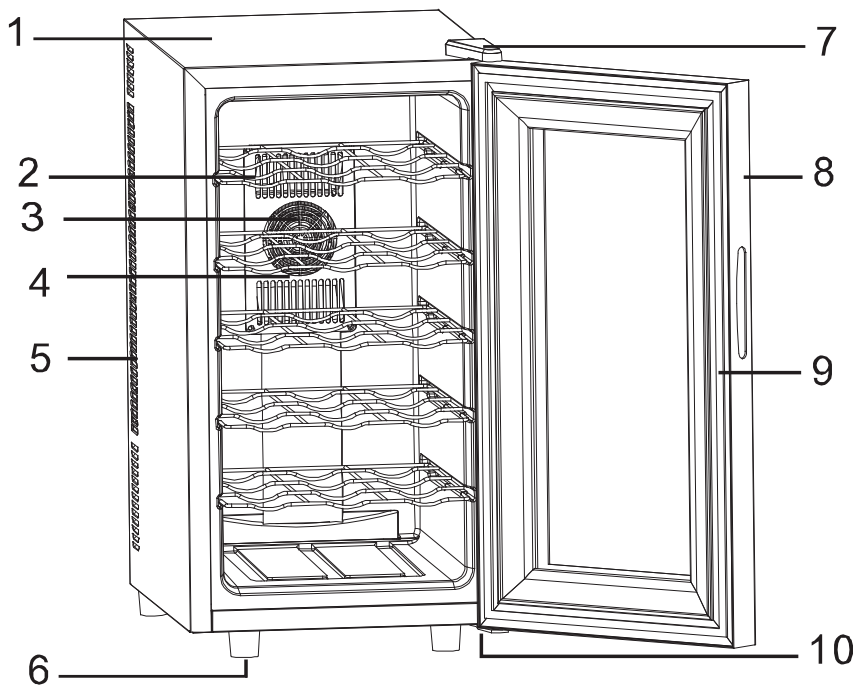

BF18

1. Housing

2. Shelf

3. Fan

4. Fan Cover

5. Ventilation Holes

6. Levelling Legs

7. Upper Hinge

8. Glass Door

9. Door Seal

10. Bottom Hinge

TEMPERATURE CONTROL

It is recommended you place the Wine Cooler in a place where the ambient temperature is between 16°-32°C/ 61°-90°F.

If the ambient temperature is above or below recommended temperature range, the performance of the unit may be affected. Placing your unit in extremely cold or hot conditions may cause interior temperatures to fluctuate. The temperature range of 12-18°C/54-64°F may not be reached.

Temperature Range of your Wine Cooler

12-18°C


54-64°F

IMPORTANT: PLEASE NOTE THAT THIS IS A WINE COOLER ONLY AND MUST NOT BE USED TO STORE FOOD.


CONTROL PANEL







HOW TO CONTROL THE TEMPERATURE

You can change the temperature display setting from Celsius to Fahrenheit by pressing the  button for 2 seconds.

Your Wine Cooler has been equipped with an automatic control panel lock, that will activate 20 seconds after the last time a button has been touched.

Push the  button for 2 seconds to unlock the control panel. You will hear a "BEEP" sound to alert you that the control panel settings option is now active.



You can set the temperature as you desire by pushing the  or  on the control panel. The temperature that you desire to set will increase by 1 °C if you push the  button once. The temperature will decrease by 1 °C if you push the  once.

NOTE: When you use the Wine Cooler for the first time or restart it after not using it for a long time, there could be a few degrees of variance between the temperature you select and the one indicated on the control panel. This is normal and it is due to the length of the activation time. Once the Wine Cooler is running for a few hours everything will be back to normal.

 
STORAGE CAPACITY

Many bottles may differ in size and dimensions. As such, the actual number of bottles you may be able to store may vary. Bottle capacities are approximate maximums when storing traditional Bordeaux 750ml bottles and include bulk storage.

INTERIOR LIGHT

You can turn the interior light ON or OFF by pushing the  button once. The light will be turned off automatically if it remains ON for 10 minutes. Press the  button again and the light will turn back on.

ELECTRIC DIAGRAM

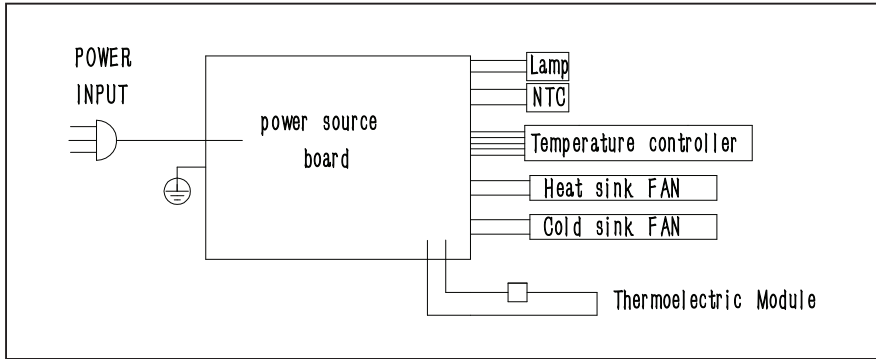

USING YOUR WINE CELLAR FRIDGE

NOTE: Position your Wine Cooler so that the plug is accessible. Keep your Wine Cooler out of direct sunlight. Do not place it next to a heat-generating appliance. Do not place directly on the ground. Provide a suitable, clean & level surface.

VERY IMPORTANT

The Wine Cooler will perform better in an ambient temperature of 20-25°C; We suggest the Wine Cooler be powered off if the ambient temperature is lower than 10°C.

After plugging in the appliance, allow the unit to cool down for 2-3 hours before placing any bottles inside.

Ventilation is very important for this kind of thermoelectric Wine Cooler; The inside electronics controlling the fridge will damage easily if the ventilation is bad. It will also reduce the life of the Wine Cooler.

If leakage occurs (which can be easily detected due to the unpleasant smell):

- 1: Switch off the Wine Cooler immediately
- 2: Ventilate the room thoroughly
- 3: Call the after-sales service department

The Wine Cooler uses a thermoelectric cooling system with an automatic defrosting system, so there is no need to defrost it manually.

POWER SUPPLY

The Wine Cooler must be connected to a properly earthed socket in line with relevant valid country regulations before operating.

Check the rating label (which is on the side of the Wine Cooler) for voltage and frequency that corresponds to your local one.

VENTILATION

Ventilation is very important for this kind of thermoelectric Wine Cooler, please refer to the following:

The appliance must be positioned where it maintains proper ventilation to the sides, top and rear of the appliance.

When positioning the wine fridge, ensure that there is at least a 2cm clearance at the sides and top, and at least a 5cm clearance at the back of the wine fridge. This will allow for adequate ventilation.

CLEANING & MAINTENANCE

Turn off and unplug the unit prior to cleaning.

CAUTION: Failure to unplug the Wine Cooler could result in electrical shock or personal injury. Never get electrical components wet.

Wipe the inside surfaces and shelves with a soft damp cloth. Be careful when cleaning the control panel, or around any electrical parts. Never spray with liquids or submerge the unit in water or any other liquid. Do not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

TROUBLESHOOTING

Symptom: No Cooling

| Possible Reason | Action |
|-----------------------|--|
| No Power | Make sure the appliance is correctly connected to power. |
| PCB is broken | Contact the after-sales service. |
| Fan is broken | Contact the after-sales service. |
| Leakage | Contact the after-sales service. |
| Cooling module broken | Contact the after-sales service. |

Symptom: The Wine Cellar Fridge is not reaching the set temperature

| Possible Reason | Action |
|------------------------------|--|
| High ambient temperature | The room temperature is hotter than normal. Keep the appliance away from heat sources. |
| The door is opened too often | Leave the door closed for a longer time. |
| Poor ventilation | Install the Wine Cooler according to our ventilation instructions. |
| The door seal is worn out | Replace the door seal - contact the after-sales service. |

Symptom: The appliance makes a lot of noise


| Possible Reason | Action |
|----------------------------|----------------------------------|
| Dust | Clean the dust from the fan. |
| Fan is broken | Contact the after-sales service. |
| Problem with the heat pump | Contact the after-sales service. |

Symptom: Frost or Ice inside the wine fridge

| Possible Reason | Action |
|--|---|
| The appliance is not defrosting properly | Turn off the fridge for at least one hour, then restart it. |
| Low ambient temperature | Adjust the ambient temperature to around 25°C. |

LENOXX

www.lenoxx.com.au

 1300 666 848

 LenoxxElectronics

 LenoxxElectronics

service@lenoxx.com.au