

WOLSTEAD

Carva Deli Style Food Slicer

Owner's Manual



IMPORTANT:

Read and follow all warnings and instructions before assembling and using the appliance. Keep this manual for future reference.

SPECIFICATIONS

Model: 716386

Voltage: 230V~ 50Hz

Power consumption: 150W

PRODUCT FEATURES

Precision slicing is easy with the Wolstead Carva Deli Style Food Slicer. Designed with a premium 19cm stainless steel blade made in Germany and a sturdy stainless steel food carriage, it delivers precise slices up to 15mm thick. A built-in blade guard and non-slip feet provide added confidence and stability while you work. Perfect for cold meats, cheeses, fresh produce, bread and more.

- Sturdy deli-style aluminium housing and stainless steel food carriage
- Removable 19cm stainless steel blade made in Solingen, Germany
- Adjustable thickness from 1 to 15mm
- Deli-style convenience at your fingertips - flip the switch to start slicing
- Extra large stainless steel food carriage
- Non-slip feet

SAFETY PRECAUTIONS

When using this electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is intended to be used in household and similar applications such as:
 - A. Staff kitchen areas in shops, offices and other working environments.
 - B. Farmhouses.
 - C. By clients in hotels, motels and other residential type environments.
 - D. By bed and breakfast type environments.
7. To protect against electric shock, do not place the cord, plug or the base of the appliance in water or any other liquid.

8. Do not use attachments or accessories which are not recommended by the manufacturer.
9. The product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
10. Always use the appliance on a firm and stable surface and keep it 30cm from other objects and the wall. Keep the cooktop at least 5cm to 10cm from other objects and the wall to ensure heat is easily released and use in a well ventilated area.
11. Do not place the appliance on or near a hot surface, including a gas or electric stove, or in a heated oven.
12. Do not move the appliance when in use.
13. Do not place anything on top of the appliance while in operation or when storing.
14. Use indoors only.
15. Do not use the appliance continuously for more than 10 minutes.
16. After 10 minutes of continuous use, the appliance must be allowed to cool for a minimum of 30 minutes.
17. Only slice foods such as cheese, boneless meats, and bread. Do not attempt to slice frozen foods or bones.
18. Always use the pusher and slide; never feed food into the blade using your hands.
19. The blade is extremely sharp. Handle with care to prevent injury, especially when cleaning.
20. To maintain food hygiene, keep the appliance clean at all times.
21. Keep hands away from moving parts.
22. Always ensure the control switch is OFF before plugging into the wall. To unplug, first turn OFF, then remove the plug from the outlet.
23. Always unplug the appliance before disassembling or cleaning.
24. Do not use the appliance with an extension cord.

GET TO KNOW THE WOLSTEAD CARVA DELI STYLE FOOD SLICER

Product components

- A. Switch
- B. Carriage
- C. Support wing
- D. Blade
- E. Blade fixing screw
- F. Food presser
- G. Feet with suction cups
- H. Slice thickness adjustment knob



BEFORE FIRST USE

- Unpack and clean the appliance as per the cleaning and maintenance section below.
- Place the appliance on a flat, stable surface.
- Ensure the slicer is in the OFF position.
- Plug into a power outlet.

 
OPERATING INSTRUCTIONS

CAUTION: This slicer has a thumb guard and pusher to protect your hands. Use the platform and handle to guide food along the blade. Always use the pusher. Never use your hands to feed food into the blade.

1. With the appliance unplugged, verify that it is positioned securely. Then place the pusher onto the platform.
2. Ensure the appliance power switch is OFF, then plug the appliance into power.
3. Place a plate or dish beneath the blade to collect slices.
4. Release the pusher from the blade and place food onto the stainless steel plate.
5. Using the pusher, guide food toward the moving blade and adjust slice thickness using the knob.
6. Turn the slicer ON, the blade and indicator light will activate.
7. Use the platform and pusher to apply steady pressure. If slicing becomes difficult, pull the food back and guide it toward the blade again slowly.
8. For better performance, you may moisten the blade with a damp cloth before use (the appliance must be turned to the OFF position and unplugged).
9. Do not slice
 - a. Food with bones
 - b. Items with large seeds
 - c. Frozen food
 - d. Food with hard rinds or packaging (e.g., aluminum foil, strings, etc.)


Removing the blade

①

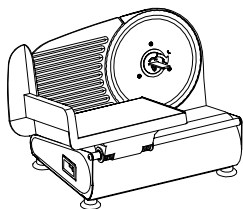


Using the handle of a spoon, turn the locking screw 90° clockwise to unlock it.

 ②

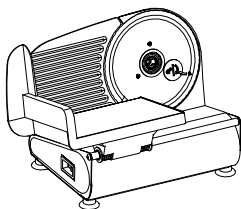

Remove the locking screw.

 
③

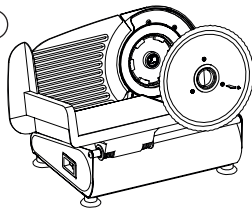

Carefully remove the blade. We recommend using gloves for extra protection.


Blade Installation

 ①

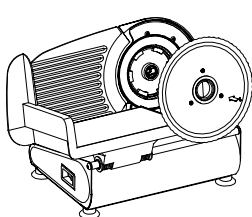


Place the blade onto the blade-mount axle. If necessary, rotate the blade slightly until it seats correctly.

 ②

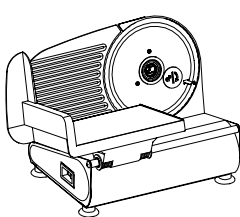

Insert the locking screw through the blade center, aligning the arrow to the right as shown.

 ③

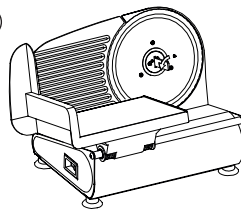

Using the handle of a spoon, turn the locking screw 90° counterclockwise to lock it in place.

Note: Handle the blade carefully. We recommend using gloves for extra protection.

CLEANING AND MAINTENANCE

1. Ensure the unit is OFF and unplugged before cleaning.
2. Wipe all parts clean with a damp soft cloth. Do not place parts in the dishwasher.
3. Do not use abrasive sponges or cleaners as they may damage the finish.
4. Never immerse the appliance in water.
5. Ensure all parts are completely dry before storage.

WARRANTY

Get in touch with Customer Service

If you experience any issues with your Wolstead Carva Deli Style Food Slicer, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday. Alternatively you can use the Live Chat function on our website by visiting www.kitchenwarehouse.com.au/contact-us

90 day money back guarantee

We promise you a full refund within 90 days if your Wolstead product does not fulfil your expectations. This guarantee applies to qualified purchases of all Wolstead branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the five year warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

WOLSTEAD

Distributed by Kitchen Warehouse.

Wolstead is a registered trademark of Kitchen Warehouse Pty Ltd. The printed material appearing in this document and related packaging is protected by copyright.

Kitchen Warehouse Pty Ltd
1 Pensioner Guard Road
North Fremantle, WA, 6159
www.kitchenwarehouse.com.au
1800 332 934
customerservice@kitchenwarehouse.com.au