 


everten

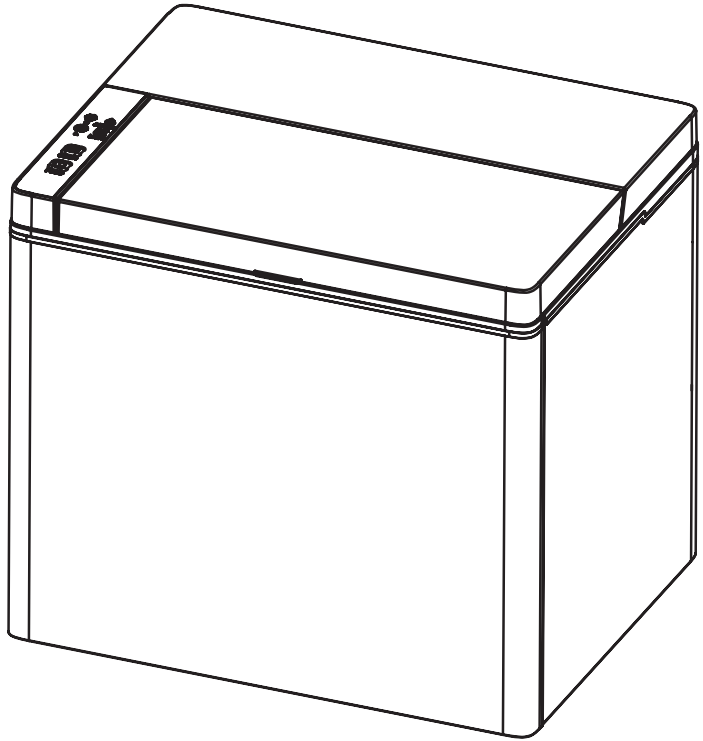

Ice Maker 12kg

IMPORTANT

Read and follow all warnings and instructions before assembly and use.
Keep this manual for future reference.

Specifications

- Model number: 685305 / 737609
- Voltage: 220 - 240V ~ 50/60Hz 1.5A
- Power consumption: 170W
- Refrigerant type R600a(41g) Climate class: T
- Bullet size :
 - Big size cube: 22x32mm
 - Small size cube: 18x30mm
- Measurement: 288*225*262mm
- Product weight: 5.6 kg

Product features

This little beast cranks out a cool 12kg of ice every 24 hours, with a fresh batch ready every six minutes! Whether you're feeling small or large bullet ice, it's got you covered for whatever drink tickles your fancy.

 
 
 
 
- Makes 12kg of bullet ice every 24 hours
- Two sizes for small or large ice
- Super simple control panel, water shortage and ice full alerts
- Compact and portable design

Safety precautions

When using this electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label.
3. If the electrical cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is intended to be used in household and similar applications such as:
 - A. Staff kitchen areas in shops, offices and other working environments.
 - B. Farmhouses.
 - C. By clients in hotels, motels and other residential type environments.
 - D. By bed and breakfast type environments.
7. To protect against electric shock, do not place the cord, plug or the base of the appliance in water or any other liquid.
8. Do not use attachments or accessories which are not recommended by the manufacturer.
9. The product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
10. This appliance features a compressor. To ensure optimal performance and prevent damage, please allow the appliance to stand upright for at least two hours before first use. This step is essential, as the appliance may have been stored upside down during shipping.
11. Do not upend this product or incline it over a 45° angle.
12. Place the ice maker on a steady, flat surface, 30cm from other objects and the wall to ensure heat is easily released.
13. Do not use the ice maker close to flames, hot plates or stoves.
14. Do not use outdoors.
15. Do not place anything on top of the appliance while in operation or when storing.
16. Always empty any water or ice from the ice maker and dry completely before storing.

GET TO KNOW THE EVERTEN ICY ICE MAKER

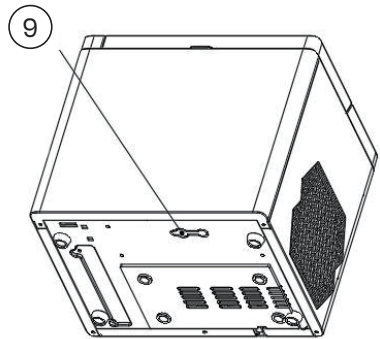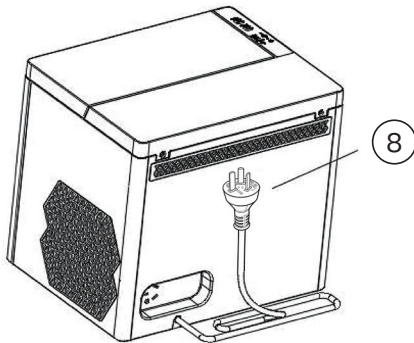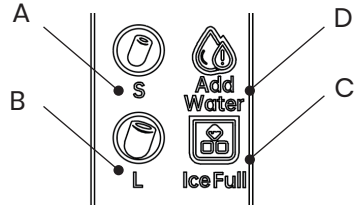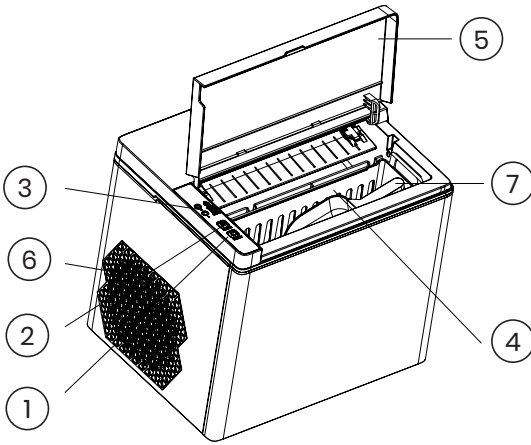


1. On/Off button
2. Ice cube select button
3. Control panel indicators:
 - A. Small ice indicator
 - B. Large ice indicator
 - C. Ice full indicator
 - D. Add water indicator
4. Ice basket
5. Cover
6. Air outlet
7. Ice scoop
8. Power cord
9. Water drain cap (located at the lower left rear of the unit)

Before first use

1. Before using the appliance for the first time, please wait two hours after positioning it, and keep the front lid open for at least two hours.
2. Remove all packing material and check your appliance to ensure it is in good condition.
3. The appliance should be placed horizontally on a level surface. To ensure proper ventilation, position it 30cm away from the wall and other appliances and objects.
4. Do not install the appliance near an oven, radiator, or any other heat source.
5. Ensure the water drain cap is firmly inserted.


Operation instructions

1. Lift the cover, remove the ice basket, and fill the water tank without exceeding the MAX mark (please refer to Fig. A). Reinsert the ice basket and close the cover. Plug in the ice maker. Press the power button to start the ice making process.

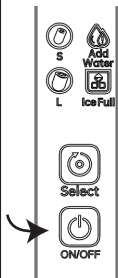


The diagram shows a vertical control panel with four buttons. From top to bottom: a 'S' button with a small circle icon, an 'Add Water' button with a water drop icon, an 'L' button with a large circle icon, and an 'Ice Full' button with a square icon containing a water drop. Below these are three larger buttons: 'Select' with a circular arrow icon, 'ON/OFF' with a power button icon, and 'Ice Full' with a square icon containing a water drop. An arrow points to the 'ON/OFF' button.

2. The default ice size is set to large, indicated by the blinking light. After powering on, press the select button to adjust the ice size. If the room temperature is below 15°C, it's advisable to choose the small setting to prevent ice cubes from sticking together.

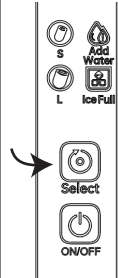


The diagram shows the same control panel as in step 1. An arrow points to the 'Select' button.

3. If there is a water shortage while the ice maker is operating, it will stop automatically, and the add water indicator will light up. Fill the water tank with clean water (without exceeding the MAX mark), and the ice maker will restart automatically.

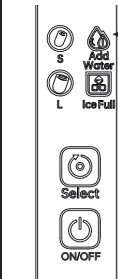

The diagram shows the same control panel as in step 1. An arrow points to the 'Add Water' button.

4. The ice maker will automatically stop when the ice basket becomes full. The ice full indicator will light up to alert you.



The diagram shows the same control panel as in step 1. An arrow points to the 'Ice Full' button.

IMPORTANT

- Each ice making cycle takes about six to eight minutes, depending on your ice cube size selection and the water/room temperature. Cooler water helps shorten the cycle.
- Only use fresh, clean water for making ice. Do not use juices, milk, or soda as they can damage the machine.
- For best results, distilled water is recommended.
- Change the water in the tank every 24 hours for a hygienic environment. If you're not using the ice maker, drain the water completely and dry thoroughly to prevent mould.

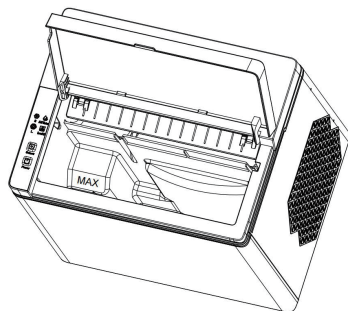 


Figure A

Cleaning and maintenance

1. Always unplug the appliance before cleaning.
2. Remove the ice basket to clean the water tank.
3. Use a mild detergent mixed with warm water to clean the tank and basket.
4. Remove the drain cap to drain out any remaining water. Leave it open to store.
5. Wipe the exterior with a mild detergent and warm water.
6. Dry all parts with a soft cloth before storing.
7. Always drain all water and dry the inside thoroughly before storage to avoid mould.
8. Vacuum the air vents on the back and sides monthly to remove dust and lint. This helps maintain the motor's efficiency.

Troubleshooting

Issue	Possible causes	Solution
The unit does not operate	No power supply.	Check your power source. Ensure 220-240V, 50-60Hz supply.
	Household fuse or circuit breaker tripped.	Reset fuse or breaker.
	Power cord not properly connected.	Ensure the cord is securely plugged into the outlet.
The add water indicator illuminates	Water shortage.	Add water up to the MAX fill mark on the water tank.
The ice full indicator illuminates	Ice basket is full.	Remove ice from the basket.
Ice cubes stick together	Ice making cycle too long.	Turn the unit off and on again. Select the small ice size if needed.
	Water temperature too low.	Replace water (7°C to 32°C recommended).

Issue	Possible causes	Solution
Ice making cycle seems normal but no ice	Ambient or water temperature too high.	Operate in room temp below 32°C. Use water between 7°C to 32°C.
	Refrigerant leakage	Contact Kitchen Warehouse Customer Service.
	Cooling system pipe blocked.	
Add water and ice full indicators blinking	Ice stuck in ice making box.	Turn off, remove stuck ice, and restart the unit.
	Mechanical failure.	If unresolved, unplug for two minutes and restart. If the problem persists, contact Kitchen Warehouse Customer Service.
	Components may be damaged.	Contact Kitchen Warehouse Customer Service.

Get in touch with Customer Service

If you experience any issues with your Everten Icy Ice Maker, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday. Alternatively you can use the Live Chat function on our website by visiting www.kitchenwarehouse.com.au/contact-us

90 day money back guarantee

We promise you a full refund within 90 days if your Everten product does not fulfil your expectations. This guarantee applies to qualified purchases of all Everten branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

everten

Distributed by Kitchen Warehouse.

Everten is a registered trademark of Kitchen Warehouse Pty Ltd.

The printed material appearing in this document and related packaging is protected by copyright.

Illustrations in this manual are for reference only and may differ from the actual product.

Kitchen Warehouse Pty Ltd

1 Pensioner Guard Road

North Fremantle, WA, 6159

www.kitchenwarehouse.com.au

1800 332 934

customerservice@kitchenwarehouse.com.au