



CLASSIC ALLERGY SENSITIVE ELECTRIC BLANKET INSTRUCTIONS

Model Numbers

TH193x91-1XC	Single
TH203x93-1XC	Long Single
TH203x107-1XC	King Single
TH193x137-2XC	Double
TH203x152-2XC	Queen
TH203X182-2XC	King
TH203x200-2XC	Super King

IMPORTANT INSTRUCTIONS:

Retain this manual and receipt for future use.

Keep electric blanket in original packaging.

(Please complete warranty form on the back page)

Please read the manual carefully before use.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of personal injury or damage to property, basic important safety instructions must be observed including the following:

Read the instruction manual thoroughly and retain for future reference.

Ensure before use you know how the electric blanket works & how to operate it.

Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.

Turn the power off and remove the plug when the electric blanket is not in use or before cleaning.

Always use the electric blanket from a power outlet of the voltage (A.C. only) marked on the rating label.

Use only the type of controller marked on the rating label.

Used only as underblanket.

Do not use if it is damp or wet.

This blanket is not intended for medical use in hospitals.

Do not use together with another heating appliance.

When in use ensure the blanket & mains leads do not get trapped.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Examine the blanket frequently to check that there are no signs of wear or damage. If any damage/wear is spotted, do not use the blanket and seek specialist advice.

If the supply cord of this appliance is damaged, it must only be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The appliance must be returned to the manufacturer or his agent if the link has ruptured.

The instructions shall state that the appliance is not to be used by young children unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.

This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.

Children under the age of three are not to use this appliance, children over the age of three must be supervised by an adult at all times while this product is in use.

Symbol explanation



Read the instructions for use



Do not bleach



Do not tumble dry



Do not iron



Do not dry clean



Do not insert pins



Do not use folded or rucked



Maximum washing
temperature 40°C,
mild process



Not to be used by very young children (0- 3) years

FITTING ELECTRIC BLANKET

The electric blanket should be laid on a firm and non-adjustable mattress. The blanket body should be laid flat from shoulder to feet when sleeping.

The electric heating blanket must be spread with the attached controller positioned towards the top of the bed. The side with the switch should preferably be placed near the shoulder for convenient operation.

To prevent the blanket from moving or creasing, fit the blanket securely to the mattress (the creased part tends to cause high temperature which may be hazardous).

USING THE BLANKET

Connect the controller to the blanket (the blanket has a socket attached that the controller slots into) and ensure it is fully connected.

Ensure there is a mains supply nearby and that when in use, the mains lead will not be in a position that could cause people to trip over it. When plugged into the mains supply, the controller must be within easy reach of the user.

For controller:

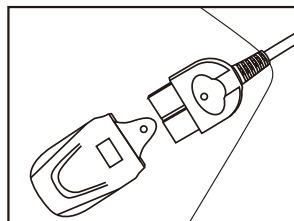 
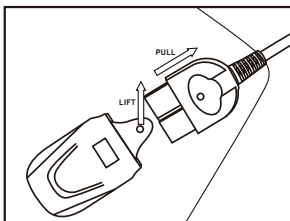 
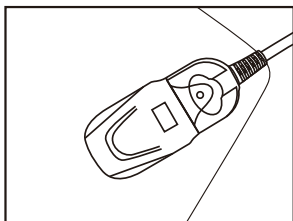 
Use your Electric Blanket with Detachable Controller Model TWK-1/T4C only.

Do not cover the controller and do not exert pressure on the controller.

Please set preheating at the highest tap '3' position 30-60 minutes before using. When using, select the appropriate tap position '1-2-3' according to human body's feeling. If you will go to sleep or use it for a long time, please set at "1" tap position which is the lowest position so as to avoid overheating which may cause human body's discomfort.

**Connecting the Controller**

To remove the controller, lift the locking tab up with your finger and pull the plug directly out. Do not pull the controller cable and do not try and pull the controller plug out without lifting the locking tab as you will damage the socket.

**After use**

When the blanket is not in use, please switch the controller to the off position; remove the plug from the power socket. If the blanket is not to be used for a long period of time, store the blanket in a cool and dry place.

STORAGE

When not in use, allow it to cool down before folding, then gently fold the blanket and place back into the packing bag it arrived in.

Make sure the blanket is dry before folding and packing it away.

The blanket should be hung in a ventilated location to dry naturally.

Do not use mothproofing agents on the blanket.

Insulation of the blanket will be damaged if the blanket is dried under the sun, ironed or when mothproofing agents are used.

Damage on the insulation material will cause safety problem.

Do not crease the appliance by placing items on top of it during storage.

The blanket should be stored in a cool dry place.

CARE INSTRUCTIONS:

DO use only as an underblanket.

DO secure blanket to bed properly before use.

DO only clean the blanket as specified in the instruction book.

DO have this blanket repaired and/or tested by an authorised electrical agent.

DO turn off and unplug when not in use.

DO remove controller before washing blanket.

DO Warm machine wash separately with maximum temperature 40°C mild process.

DO Line dry in shade when excess water has been removed.

DO NOT use as an over blanket.

DO NOT use tucked in, folded, rucked, bunched up or creased.

DO NOT use with element or wired parts tucked in.

DO NOT use electric blanket or the bedding material if soiled with oil. This includes physiotherapy, massage and cooking oils.

DO NOT use if wet.

DO NOT insert needles or pins into blanket.

DO NOT use with damaged element or cables.

NOT TO be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.

NOT TO be used by very young children.

DO NOT cover controller.

DO NOT bleach/tumble dry/spin dry/dry clean.

DO NOT peg wired parts/wring/iron.



Dreammaker 

Please also refer to the Troubleshooting Table for additional information prior to contacting the service department.

If the troubleshooting table is not able to help solve your problem, please call our service department on +61 2 9738 1118 before returning the product for replacement as they may be able to help.

TROUBLESHOOTING TABLE

Problem	Cause	Remedy
No power to controller / No indicator lights.	The temperature slide knob is in the "0" position.	Slide the knob to setting 1, 2 or 3. The corresponding front display lights should illuminate.
	The power plug may not be plugged in to the power source and switched on.	Ensure the power plug is inserted into the power source correctly and switch on.
	There may be no power to the power point.	Ensure there is power to the power point. Test with another appliance such as a table lamp.
	The internal current fuse has blown due to the elements in the blanket being damaged during use. This will cause the controller and blanket to permanently shut down. Please read "Important safeguards" and "Securing your electric blanket" to prevent any misuse.	A new blanket must be purchased.
The indicator light is on but the blanket is not heating.	The selected heat is too low.	Increase the heat setting.
	Preheat time is too short.	Allow the blanket more time to heat on the bed. More time is required depending on the ambient temperature and the bed temperature.
	The bed covers are not pulled up over the mattress and blanket.	Pull the bed covers up over the mattress and blanket. Do not cover the controller.
Controller slide knob is in the 1,2 or 3 heat setting but the indicator light is not on.	The power plug may not be plugged in to the power point and switched on.	Please follow the same steps as under "No power to controller/ No indicator light".
	The internal current fuse has blown in the controller.	Please follow the same steps as under "No power to controller/ No indicator light".
The controller is warm to touch.	This is normal.	Nothing to do. It is no cause for alarm.
The tube from the blanket to the controller is warm.	This is normal. The elements run inside the tube from the blanket to the controller and will get warm when in operation.	Nothing to do. It is no cause for alarm.

3 YEAR WARRANTY

(IMPORTANT: Please complete and retain this warranty page)

Product Name _____

Brand Name **Dreamaker** _____

Size _____

Part Number _____

Model Number _____

Name _____

Address _____

Email _____

Phone No. _____

Place of Purchase _____

Date of Purchase _____

Dreamaker Electric Blankets are covered by a 3-year warranty from the date of purchase against defects in materials and workmanship. Please retain your proof of purchase as it will be required to validate any warranty claim. This warranty does not cover damage resulting from misuse, improper installation or care, commercial use, normal wear and tear, accidental damage, modification, or un-authorised repair.

Dreamaker reserves the right to repair or replace the product or any defective part at its discretion.

This warranty is in addition to your rights under the Australian Consumer Law. Our goods come with guarantees that cannot be excluded under Australian law. You are entitled to a replacement or refund for a major failure. For warranty claims or assistance, please contact Dreamaker Customer Care at info@dreamaker.com.au or visit www.dreamaker.com.au.

Attach a photocopy of your receipt, showing the date of purchase to this warranty page and keep for your record.

Dreamaker 

www.dreamaker.com.au